

ABS indicator lamp



Function

Indicator light for Anti Blocking System:

When ignition is turned on, the system performs a self-test; the light is lit during this test that lasts about 3 seconds, after which the light should turn off. If there is a system malfunction during an operation the system tries to carry out the operation as well as possible. When the operation has ended, the system is disengaged and the indicator light is lit