

Hydraulic-pump



Function

The hydraulic pump builds up a pressure which the modulator valves must have for regulations of the brake pressure for each wheel.

Voltage supply 12V. Check functioning of the pump by applying battery voltage to the two pins of the connectors (see diagram) the pump should work. **IMPORTANT!! THE PUMP MUST ONLY WORK FOR A FEW SECONDS** otherwise you can damage the pump or the modulator unit. Note that any relays also should be demounted.