

Airbag driver's side



Function

The airbag drivers side, is installed in the steering wheel. It contains an ignition charge, a gas generator and airbag. The ECU ignites the airbag in collisions over 30 km/h. Check the rules about security, when working on these systems.

Quickcheck

Safety rules while working on airbag and seatbelt tensioner systems. Turn ignition off, and remove the key. Remove the ground cable from the battery. Never perform a measurement directly on the airbag/ seatbelt tensioner unit while the current from the measuring device can activate them. Lock the mechanical seat belt tensioners before working with them. Typical an arm which is pulled out, and then turned 90°. Wait at least 2 minutes before starting the work to be sure that the systems is discharged.