

Airbag passenger's side



Function

The airbag passenger's side, is installed in the dashboard in front of the passenger. It contains an ignition charge, a gas generator and airbag. The ECU ignites the airbag in collisions over 30 km/h. Check the rules about security, when working on these systems.

Quickcheck

Safety in working with airbags and seat belt pretensioner: Turn off ignition, extract key and disconnect the battery poles (minus first). Never measure on airbag and seat belt units. The gauge can launch the units. Lock Mechanical seat belt pretensioner's, typically by drawing an arm and turn it 90 degrees. Wait at least 2 minutes before working with the systems.