


Clockspring

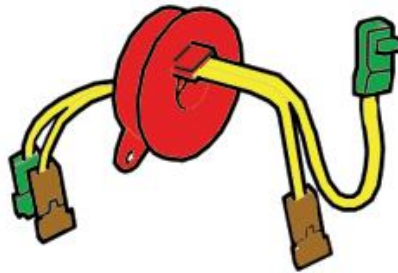

Function

The Clock spring is located between the steering wheel and the steering pillar. It's a spring that can follow the movement of the steering wheel, there by securing the same resistens at all time's. Allways make sure, that the steering whell is faced forward when replacing this component.

Quickcheck

Safety in working with airbags and seat belt pretensioner: Turn off ignition, extract key and dismount the battery poles (minus first). Never measure on airbag and seat belt units. The gauge can launch the units. Lock Mechanical seat belt pretensioner's, typical by drawing an arm and turn it 90 degrees. Wait at least 2 minuttes before working with the systems. Check: Check the resistans through the clock spring. Has to be the same, regarding the position of the steering wheel.