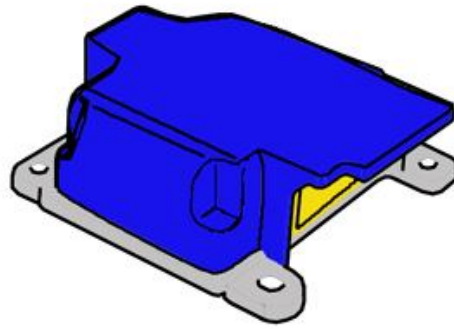


SRS ECU

**Function**

Control unit for airbags. Gives the signal to launch, if the conditions are right. The conditions are signals from occupant weight sensor, seatbelt switch and front collision sensor.

Quickcheck

Safety in working with airbags and seat belt pretensioner: Turn off ignition, extract key and dismount the battery poles (minus first). Never measure on airbag and seat belt units. The gauge can launch the units. Lock Mechanical seat belt pretensioner's, typical by drawing an arm and turn it 90 degrees. Wait at least 2 minutes before working with the systems. Measurement: Check the fault code storage (remember to proceed with the safety procedure as above), Check connector and connections. Check all pin circles such as sensors