

SRS lamp

Function

The SRS lamp is on shortly, when ignition is turned on. When the self diagnosis is over, the lamp should turn off. If not, there is a defect in the system.

Quickcheck

Safety in working with airbags and seat belt pretensioner: Turn off ignition, extract key and dismount the battery poles (minus first). Never measure on airbag and seat belt units. The gauge can launch the units. Lock Mechanical seat belt pretensioner's, typical by drawing an arm and turn it 90 degrees. Wait at least 2 minutes before working with the systems.