
 


29-02-001 , Engine Control 2,0 I 8V/16V EFI (Manual Transmission) , Ignition before 03/96

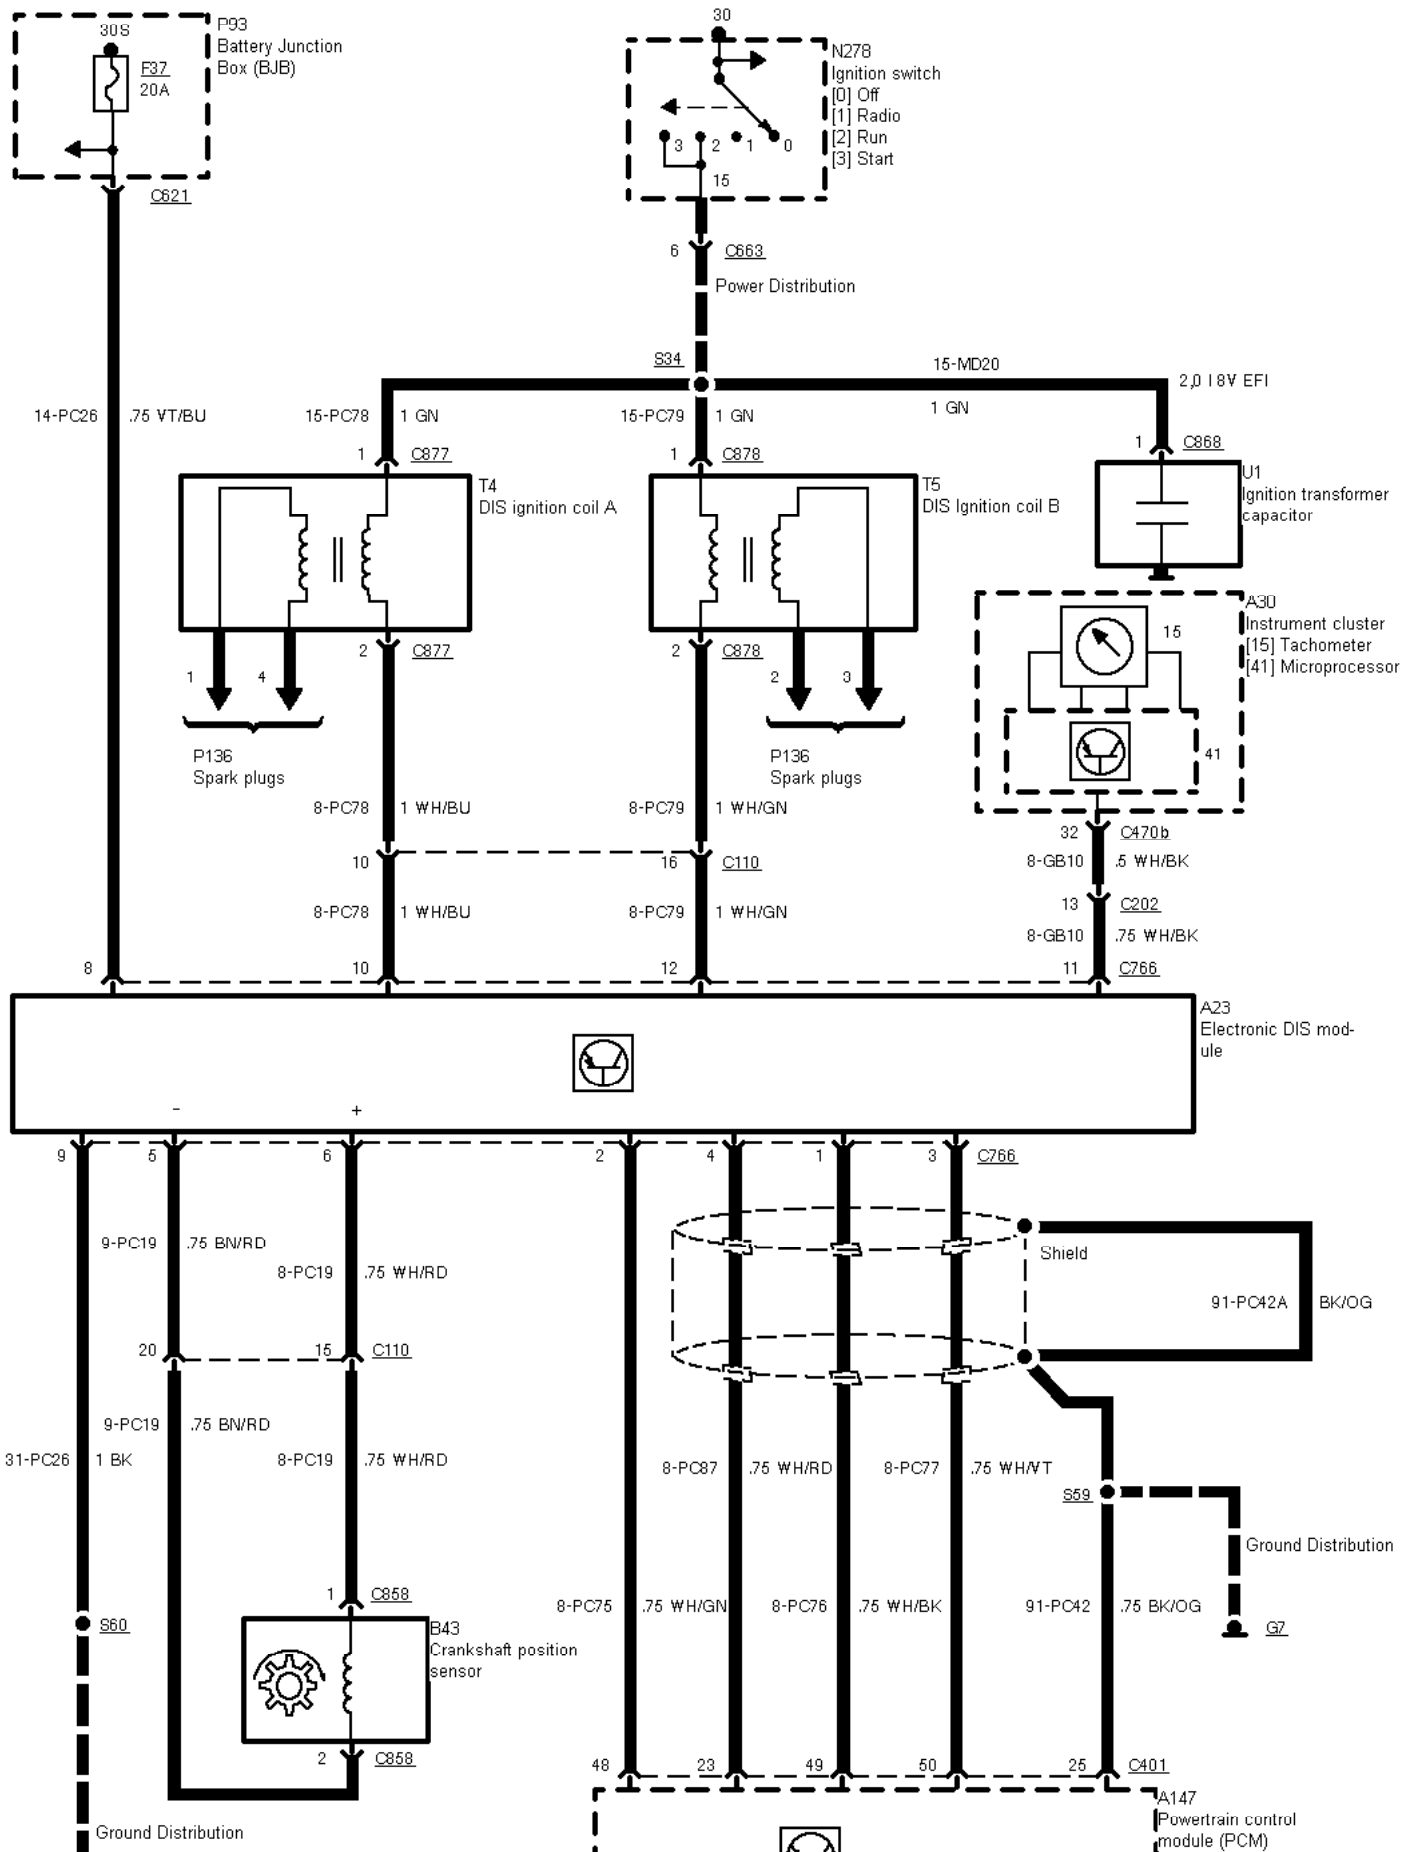





29-02-002 , Engine Control 2,0 I 8V/16V EFI (Manual Transmission) , Ignition as of 03/96

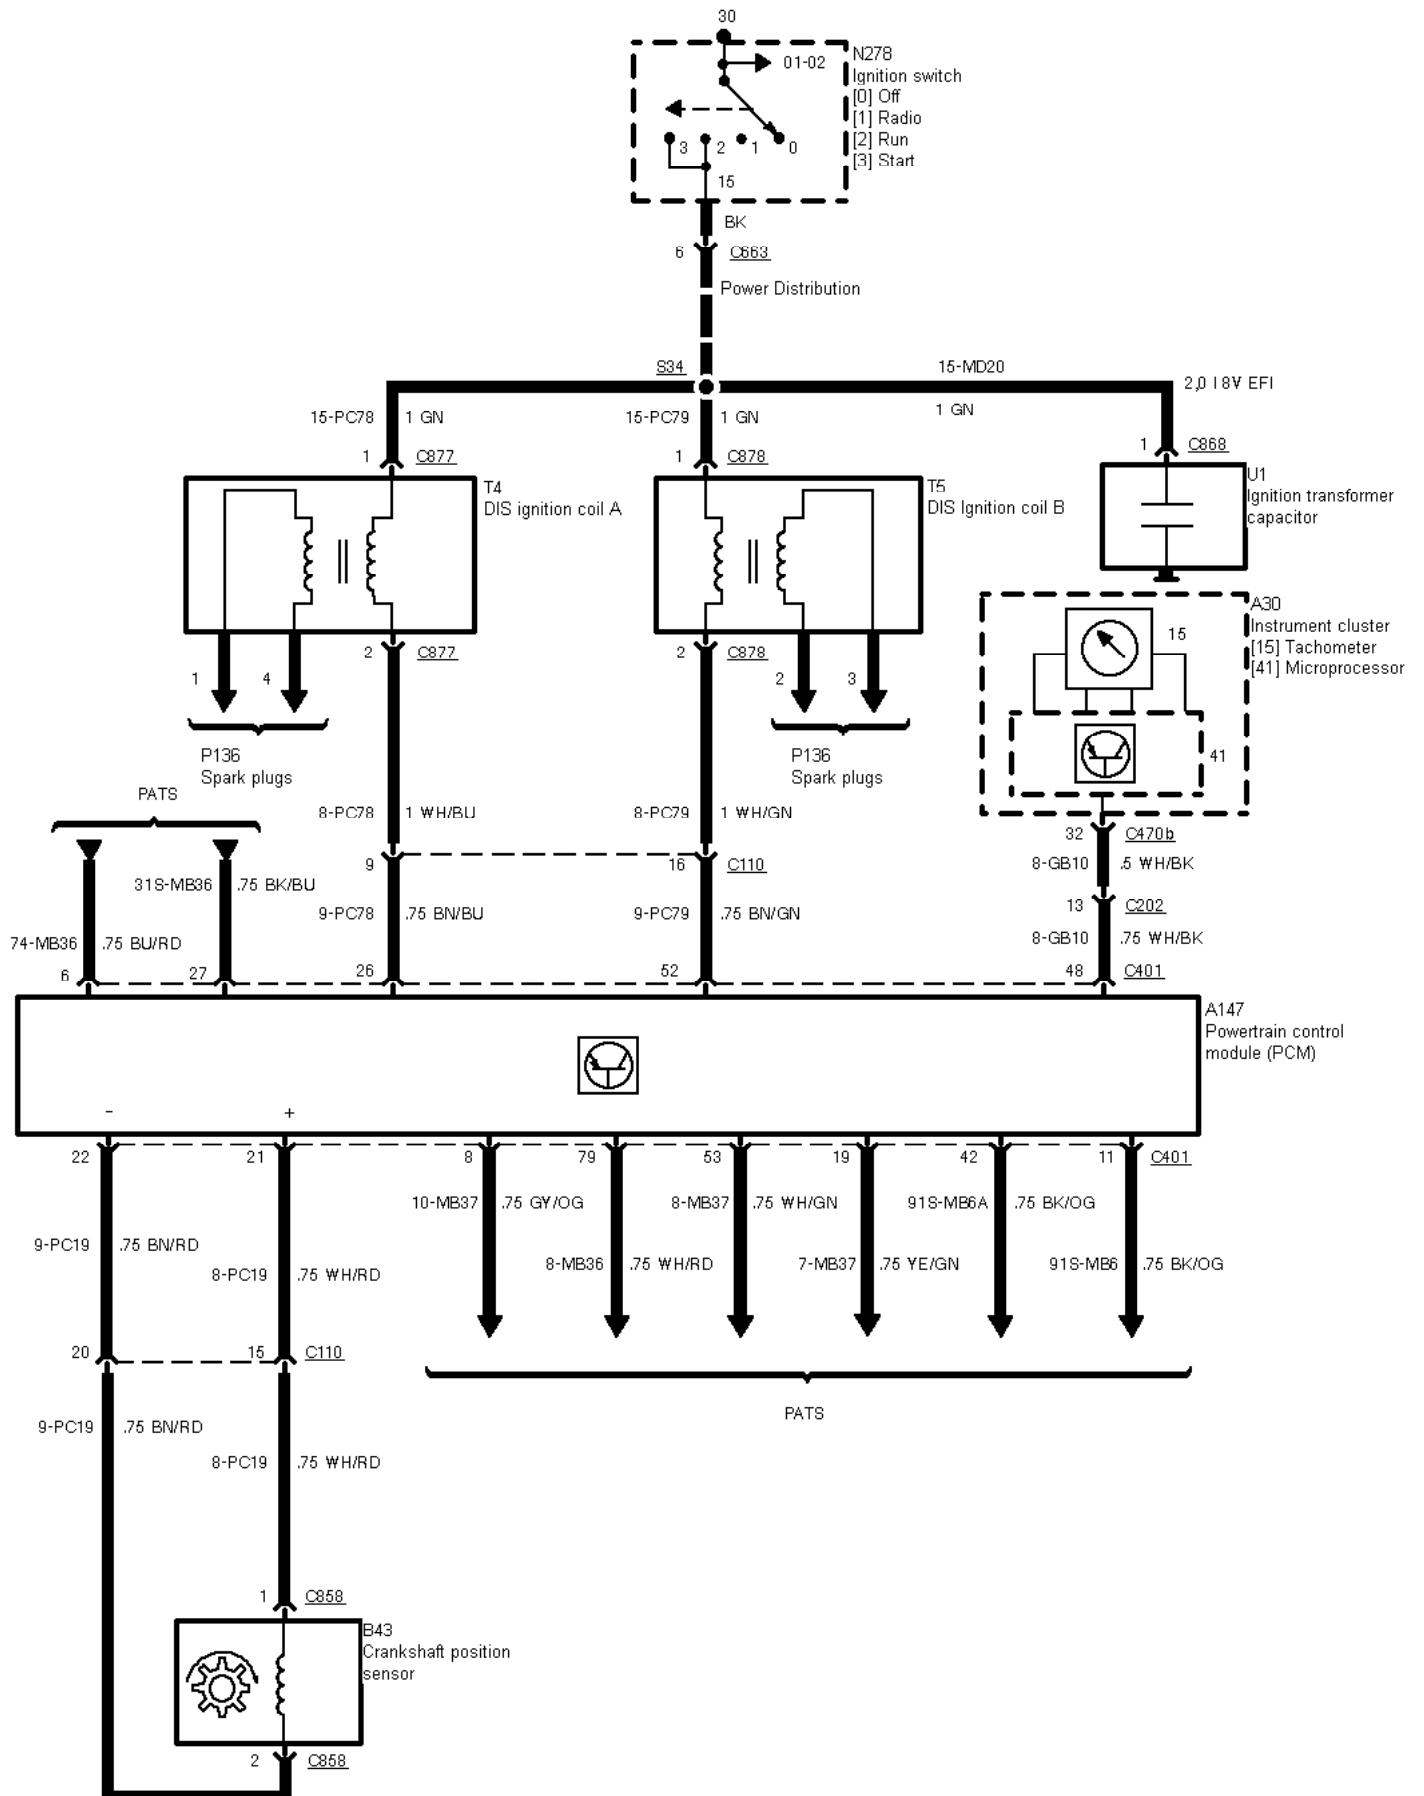


29-02-003 , Engine Control 2,0 I 8V/16V EFI (Manual Transmission) , Sensors

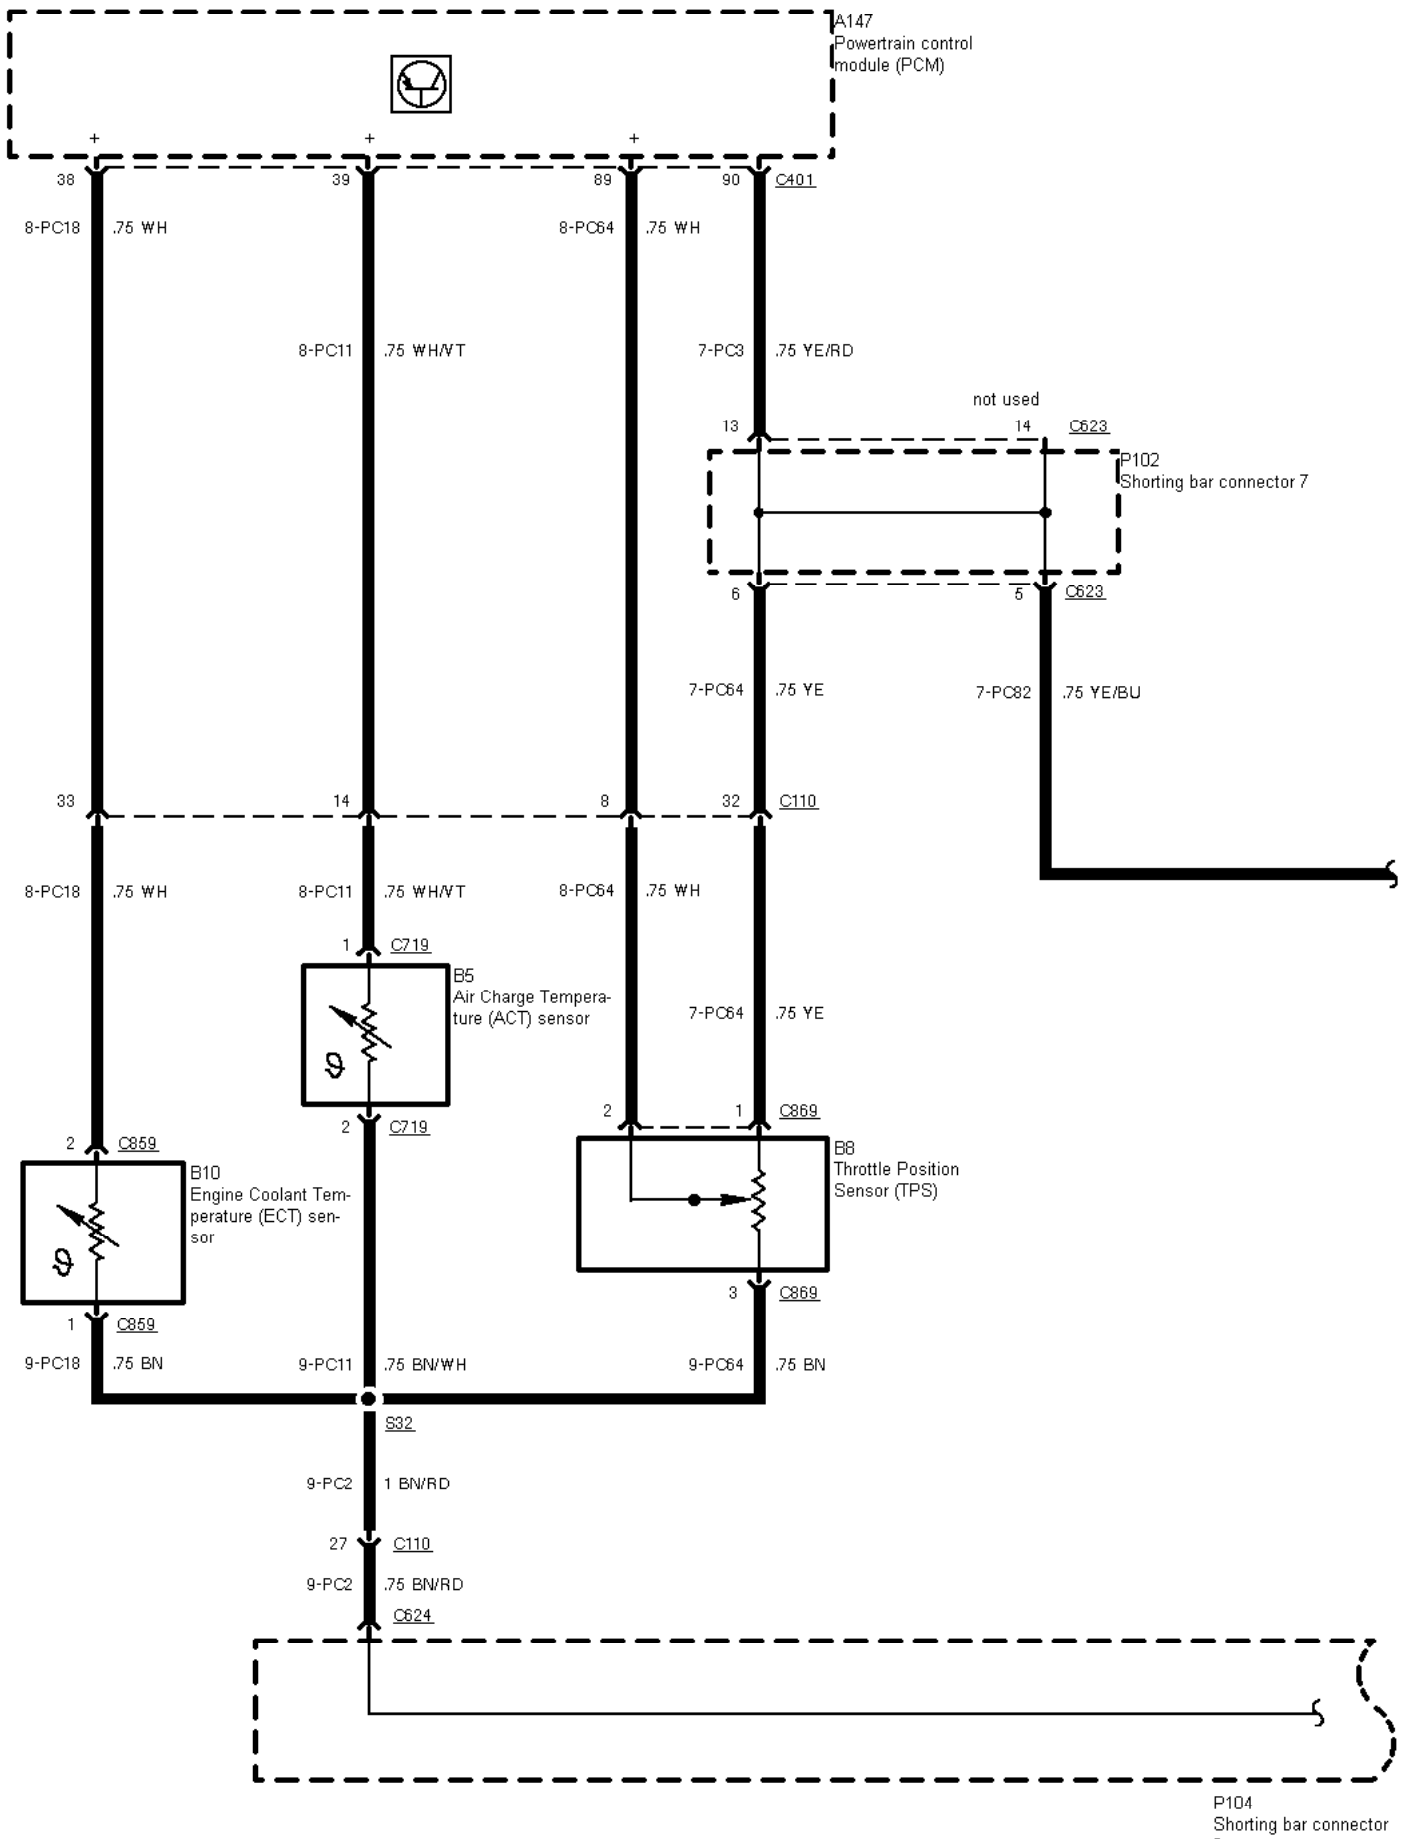


29-02-004 , Engine Control 2,0 I 8V/16V EFI (Manual Transmission)

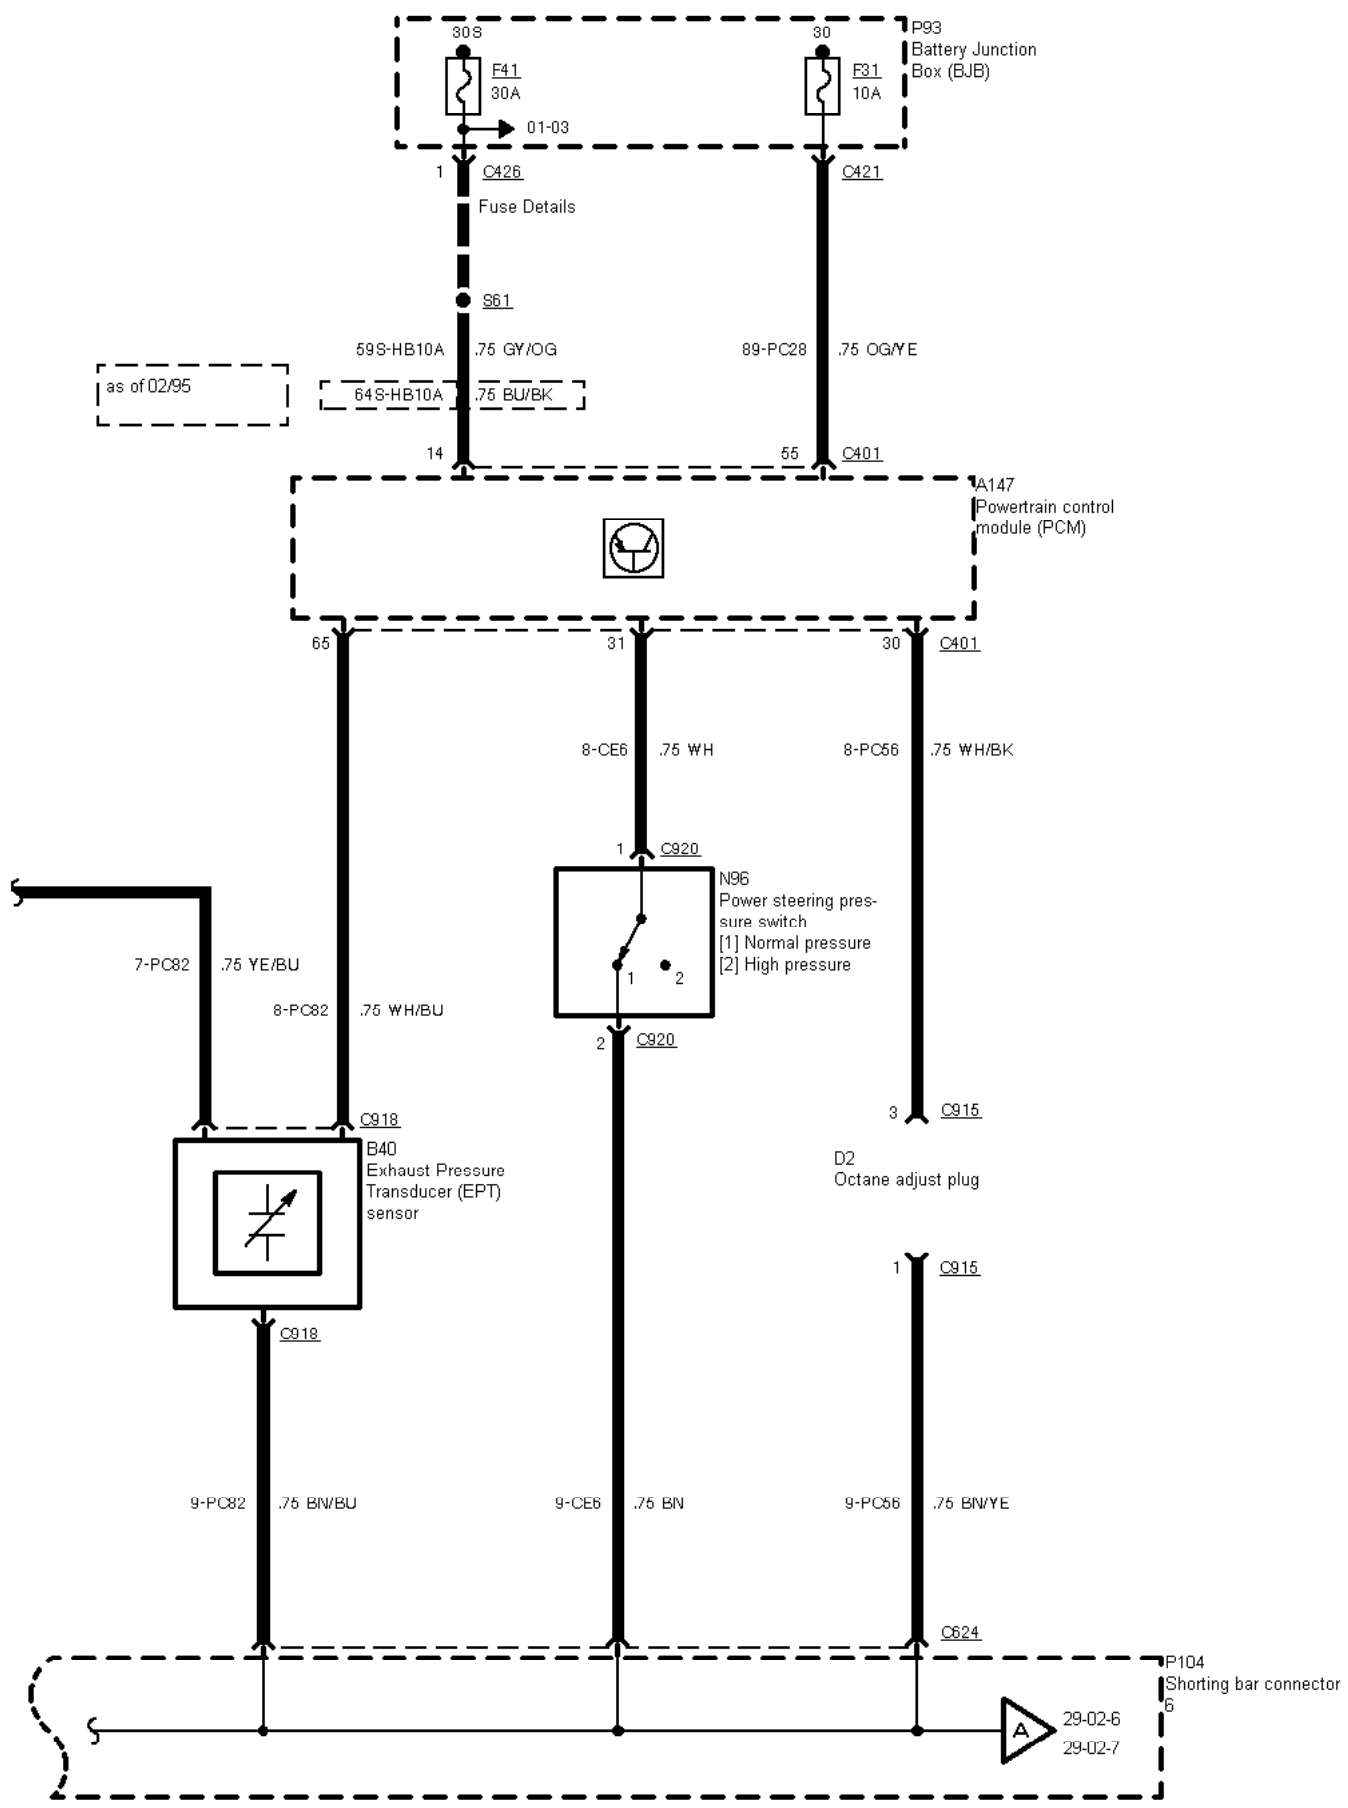


29-02-005 , Engine Control 2,0 I 8V/16V EFI (Manual Transmission) , Fuel injection

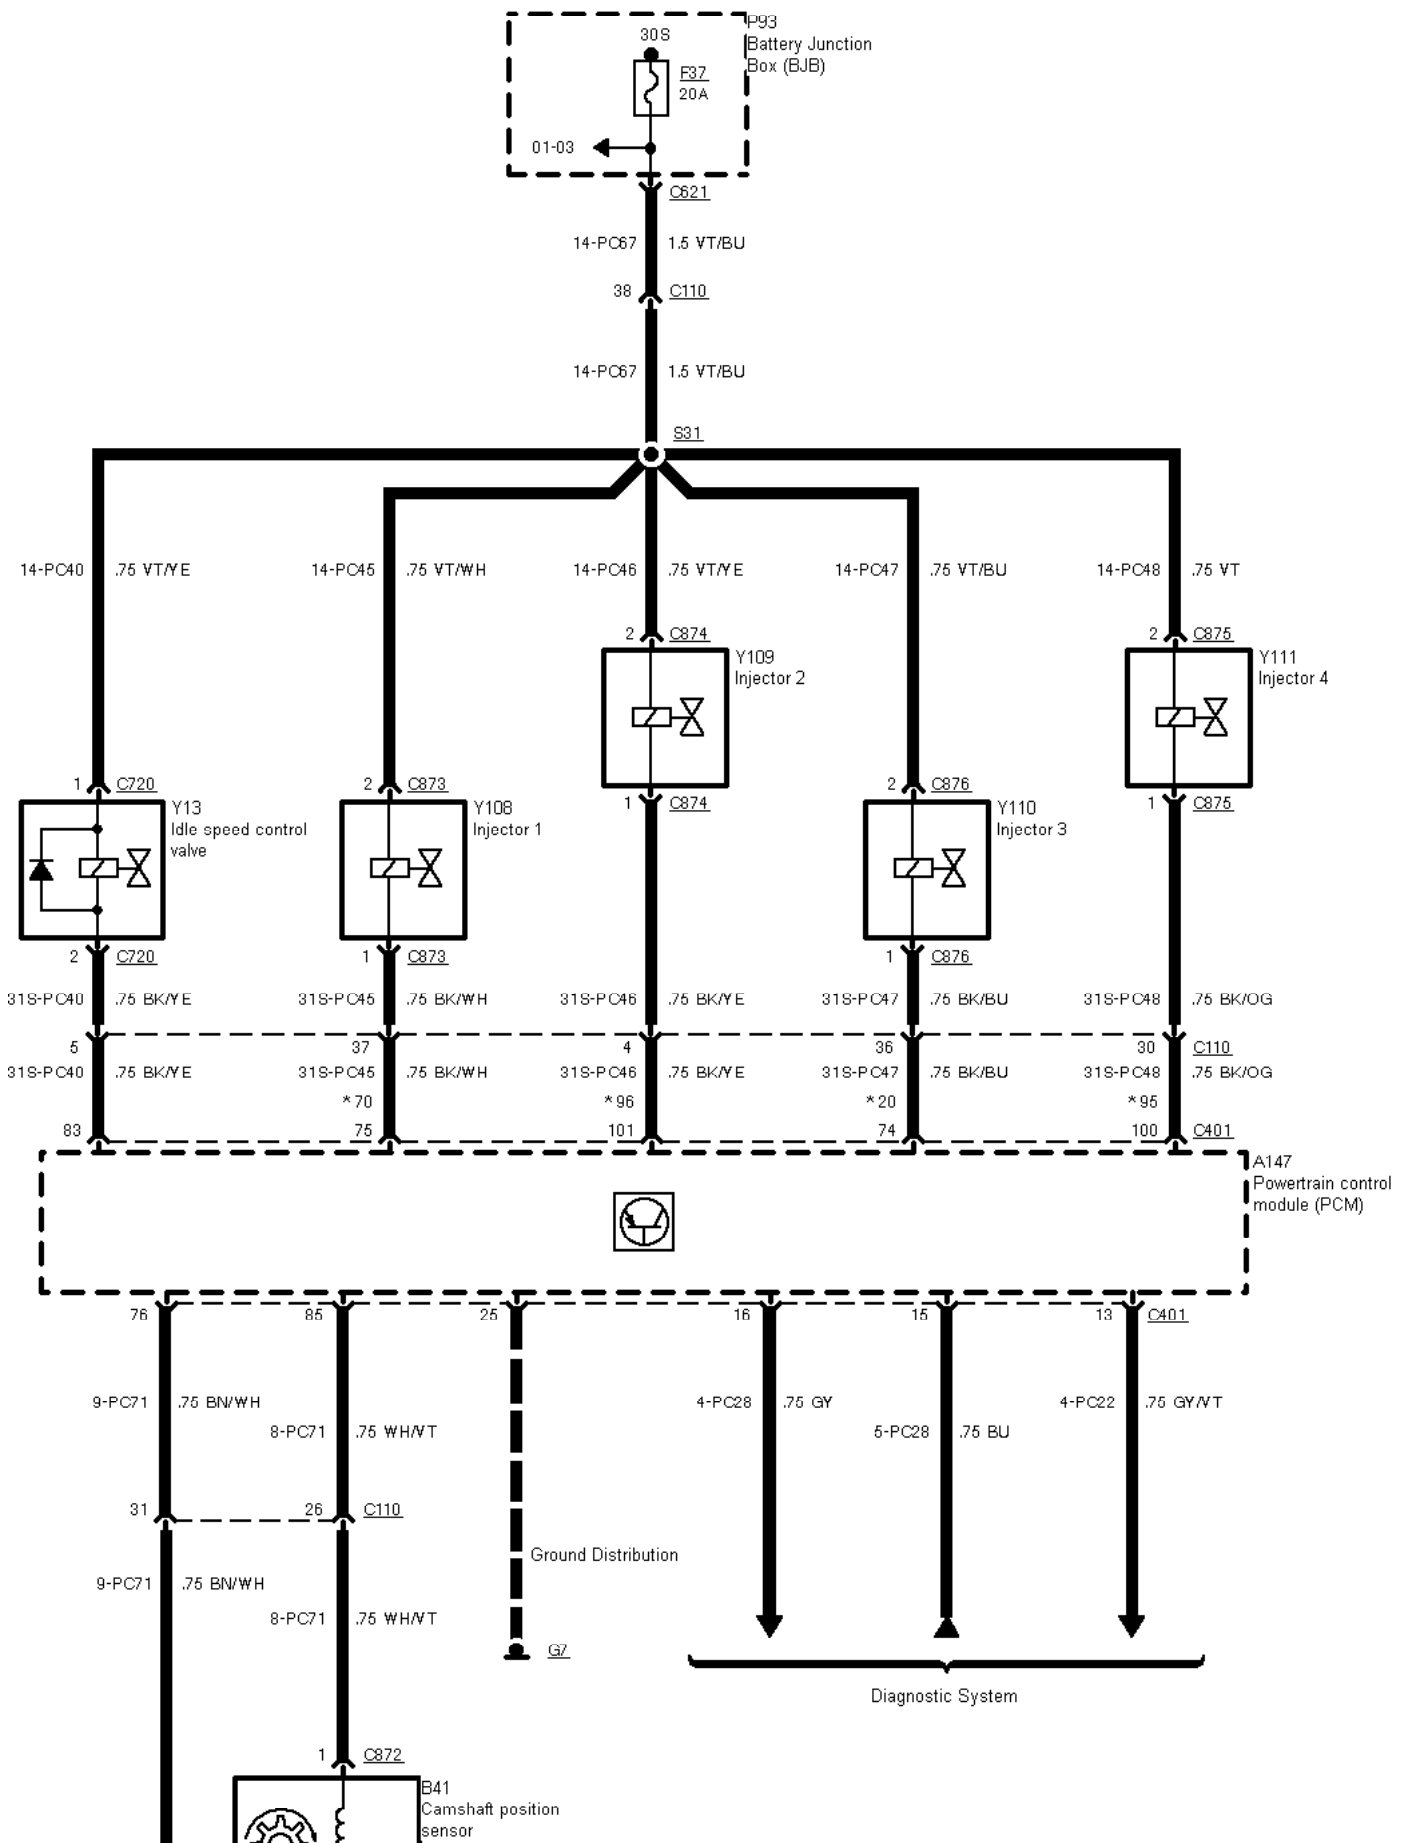


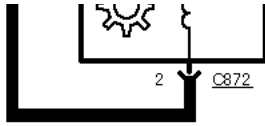


* with PATS


29-02-006 , Engine Control 2,0 l 8V/16V EFI (Manual Transmission) , 2,0 l 8V EFI from 02/95 to 03/96 and as of 04/97

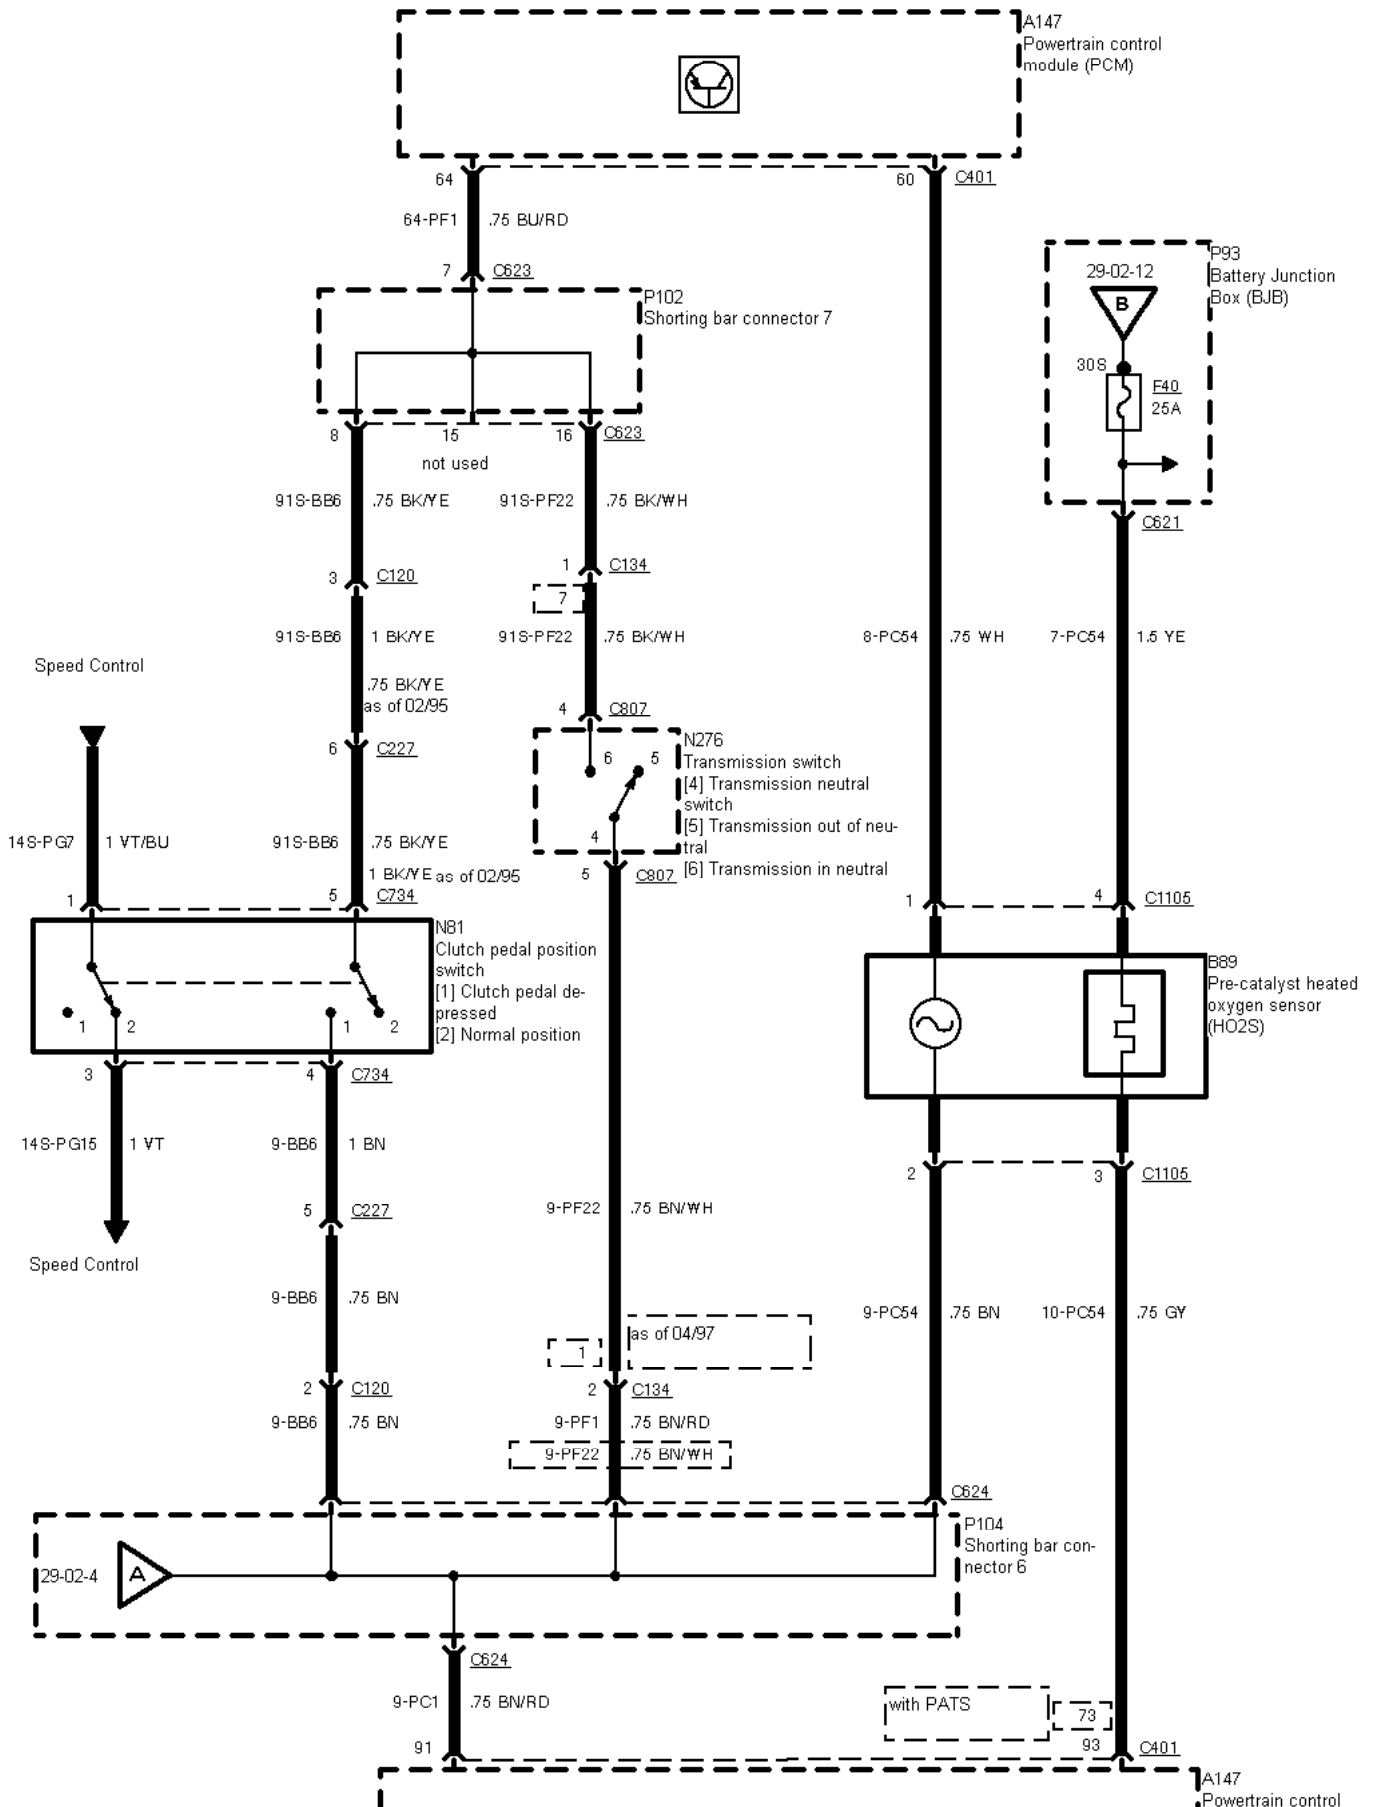

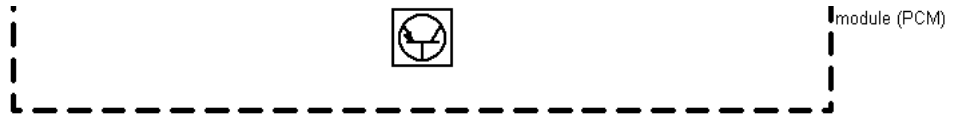


29-02-007 , Engine Control 2,0 I 8V/16V EFI (Manual Transmission) , 2,0 I 16V EFI, 2,0 I 8V EFI before 02/95, 2,0 I 8V EFI from 03/96 to 04/97

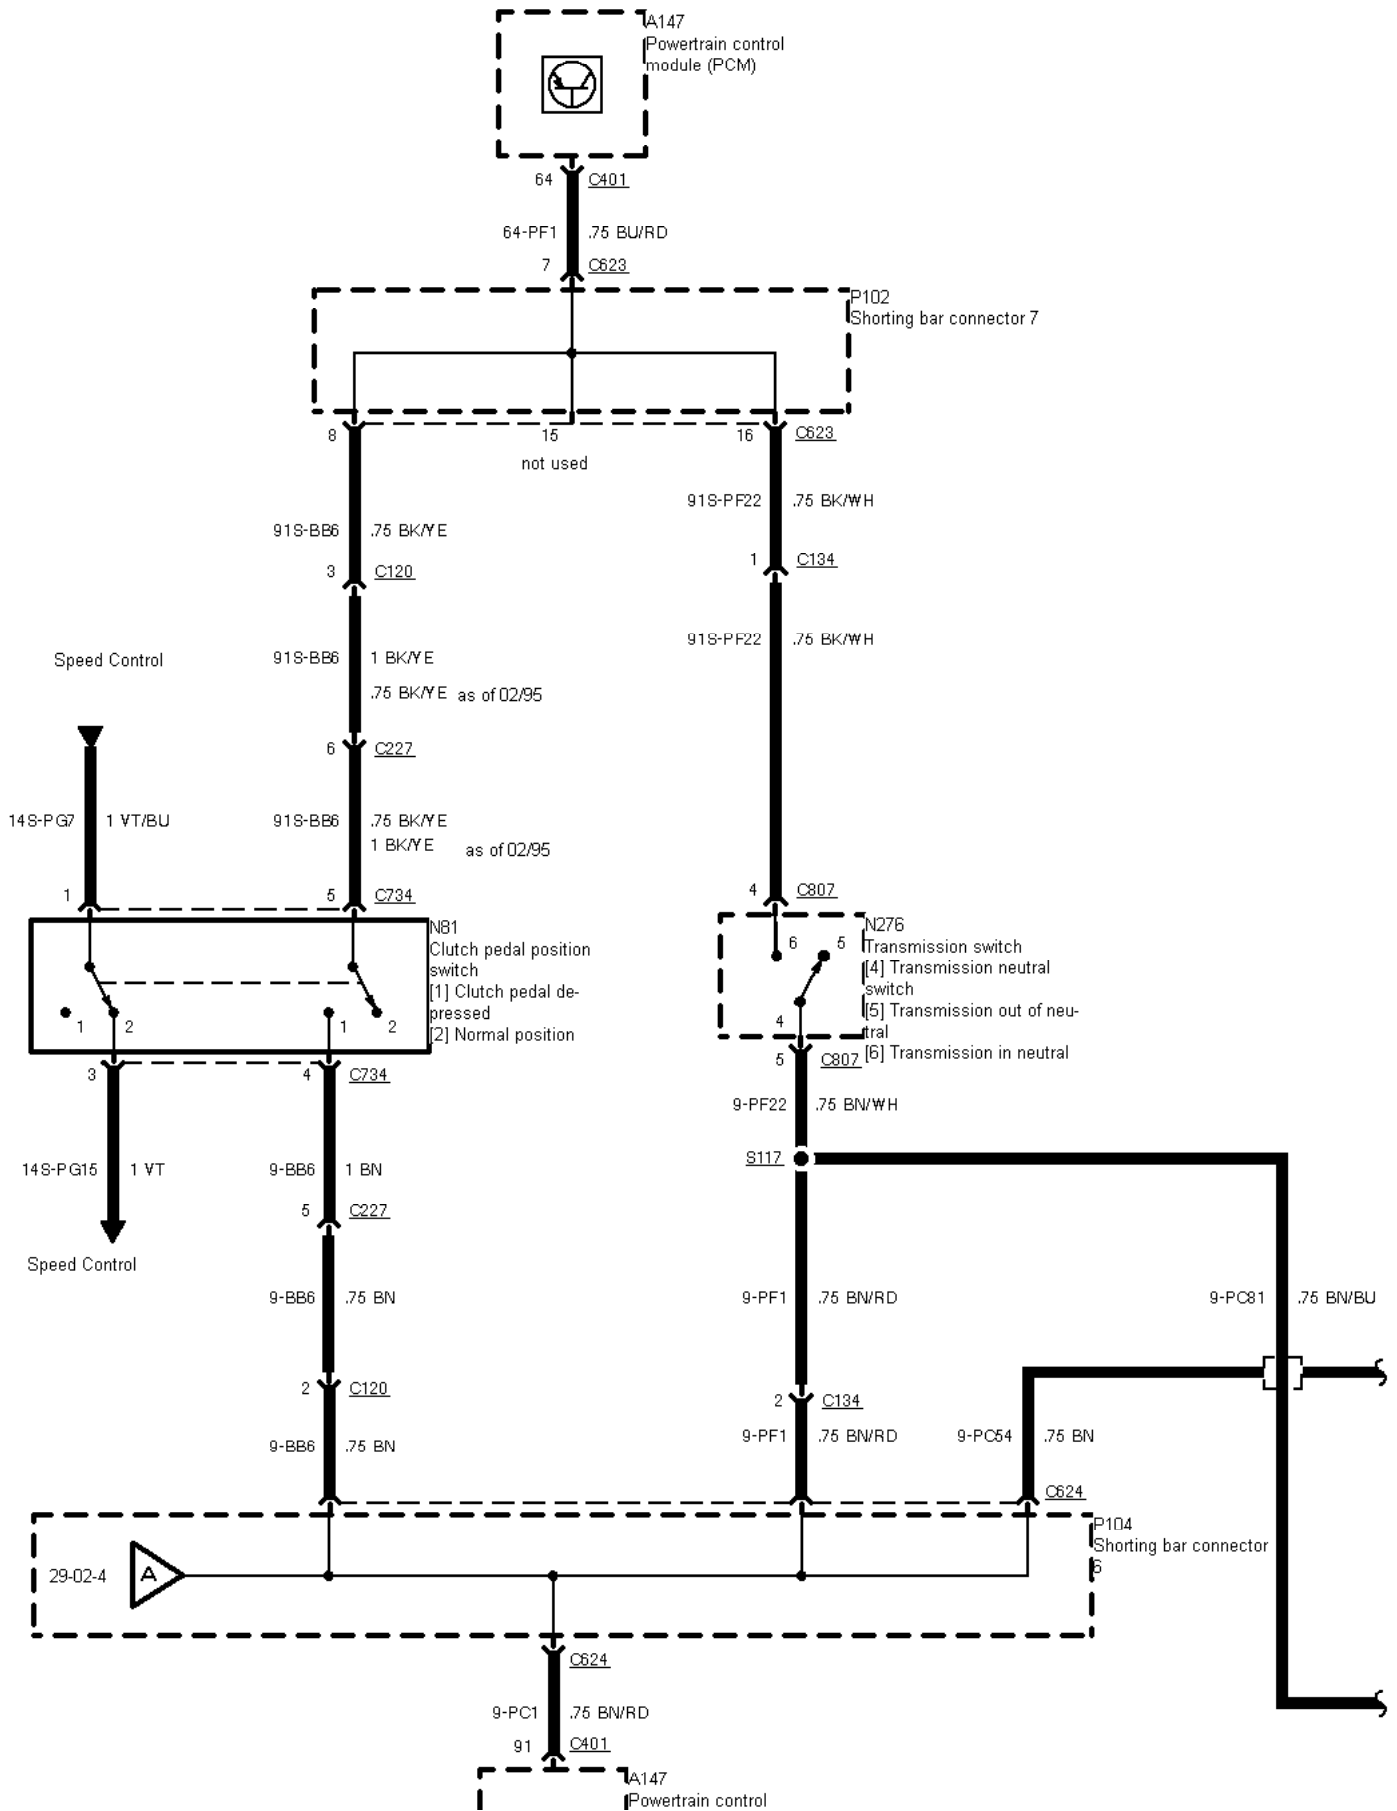


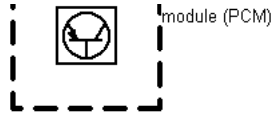

29-02-008 , Engine Control 2,0 l 8V/16V EFI (Manual Transmission) , 2,0 l 16V EFI, 2,0 l 8V EFI before 02/95, 2,0 l 8V EFI from 03/96 to 04/97 Sensors

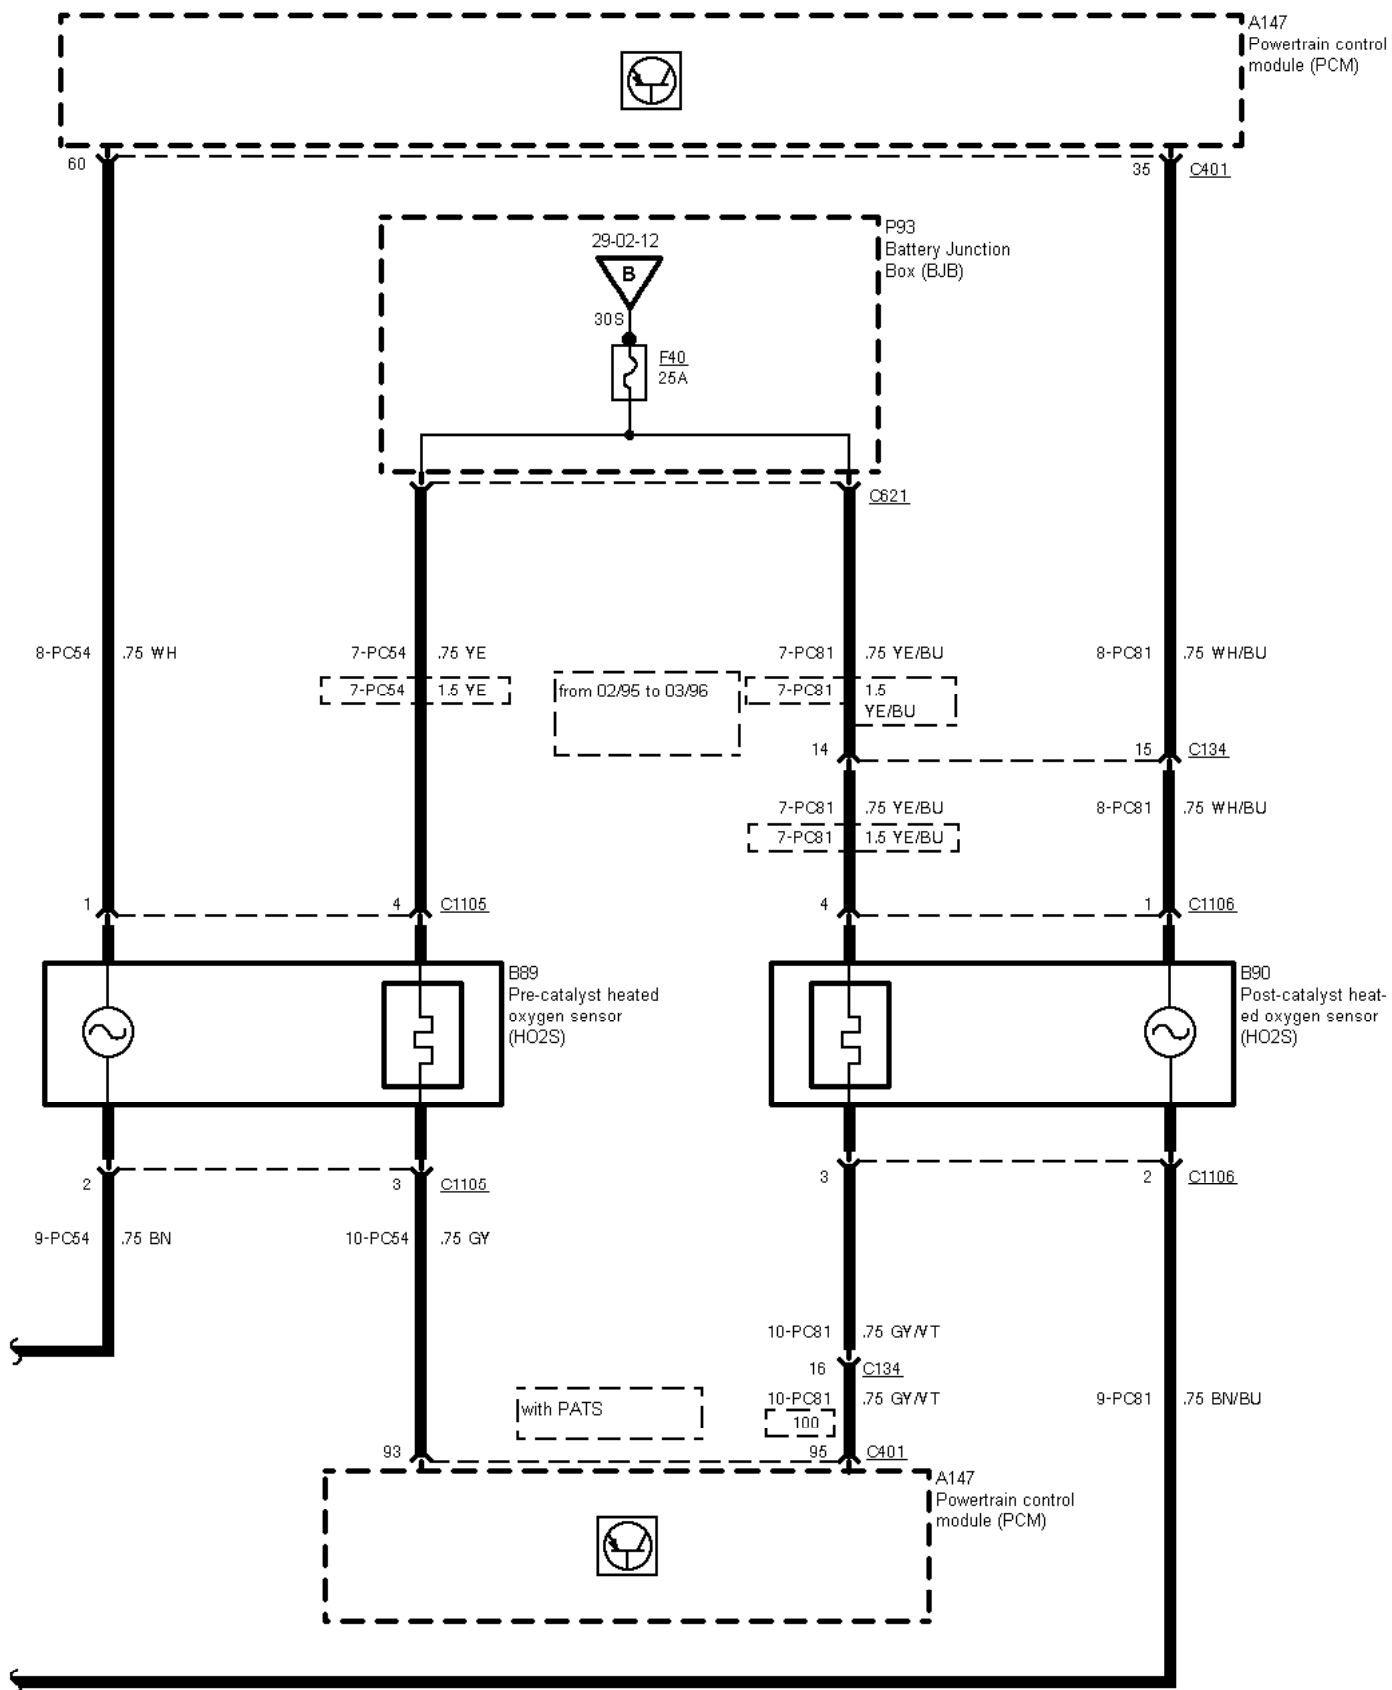


29-02-009 , Engine Control 2,0 I 8V/16V EFI (Manual Transmission)

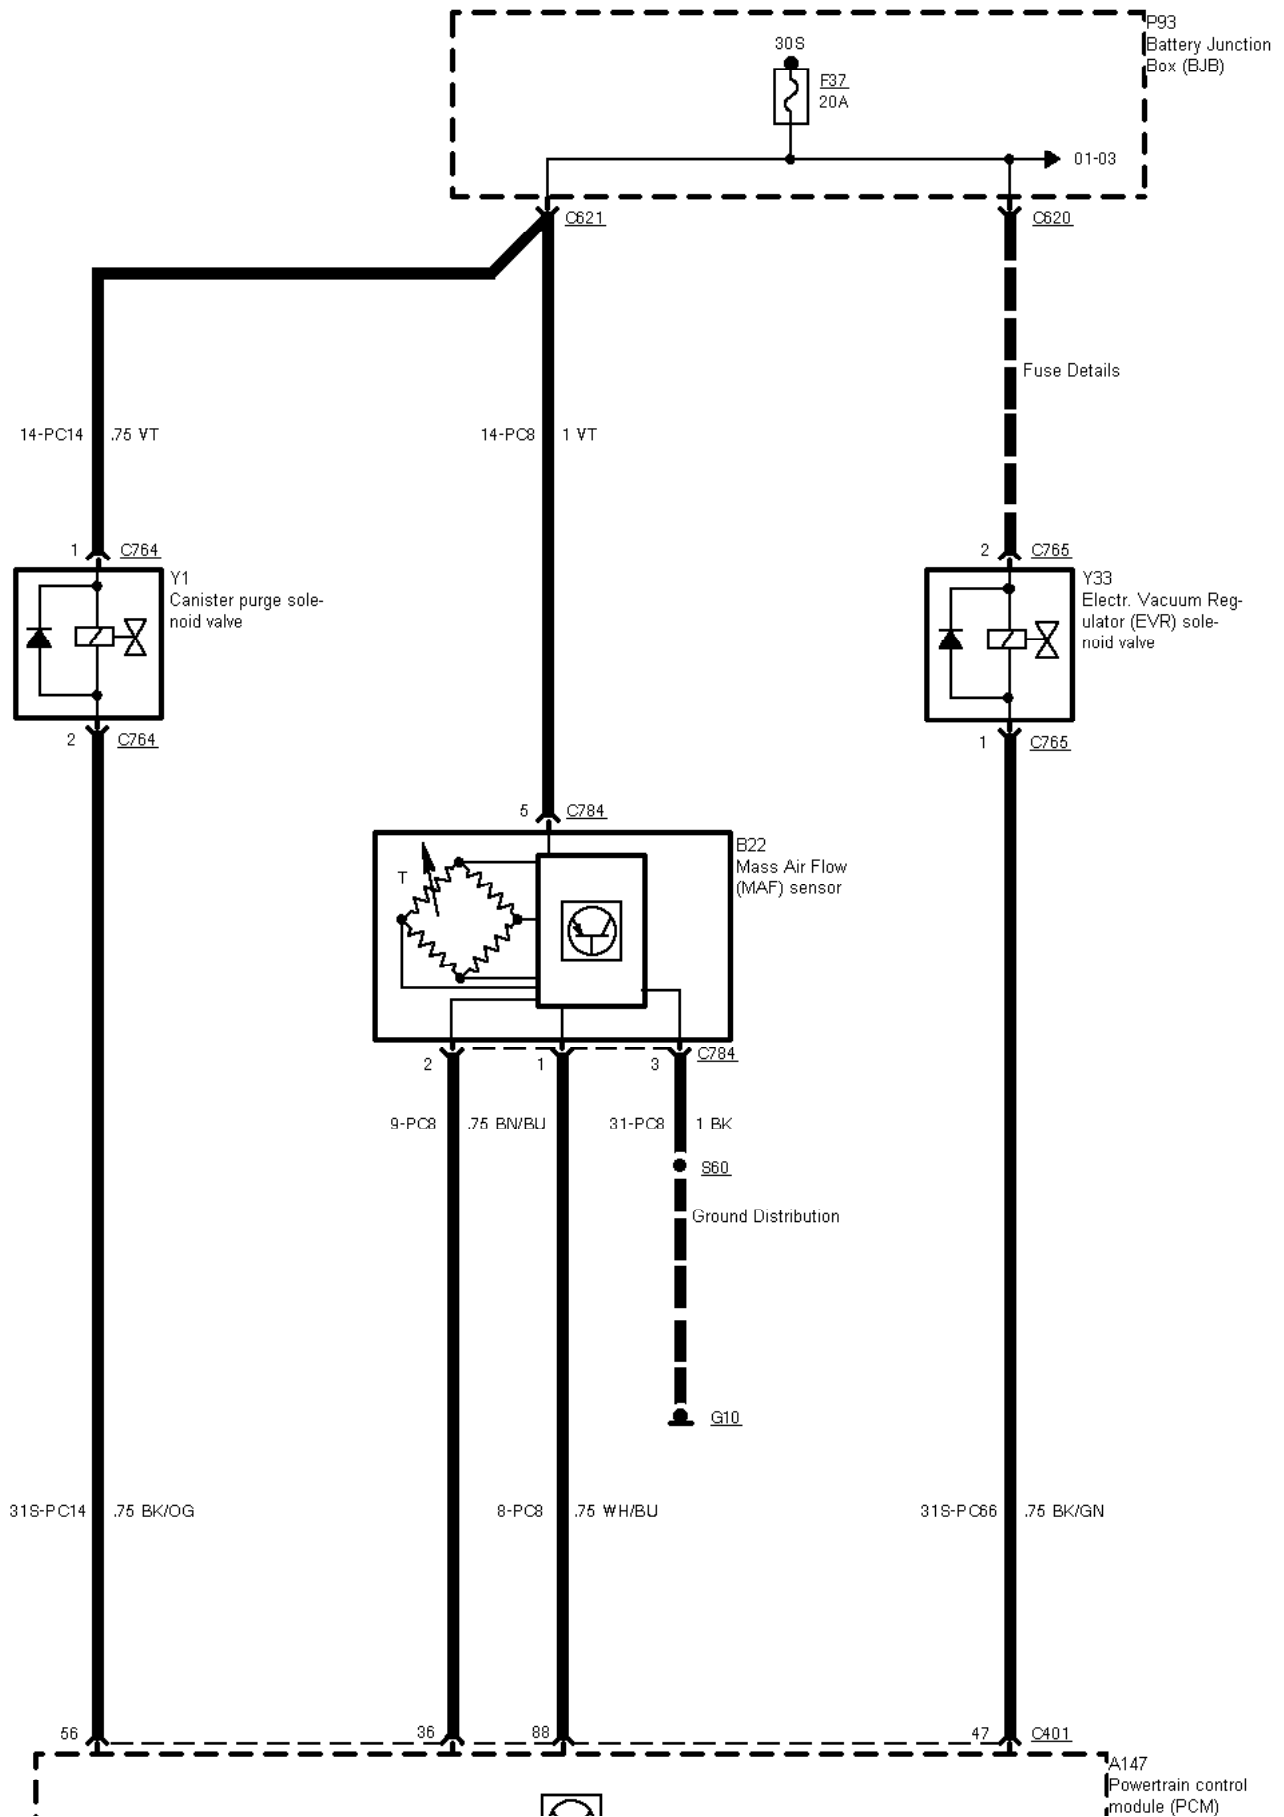




29-02-010 , Engine Control 2,0 I 8V/16V EFI (Manual Transmission) , Before 03/96

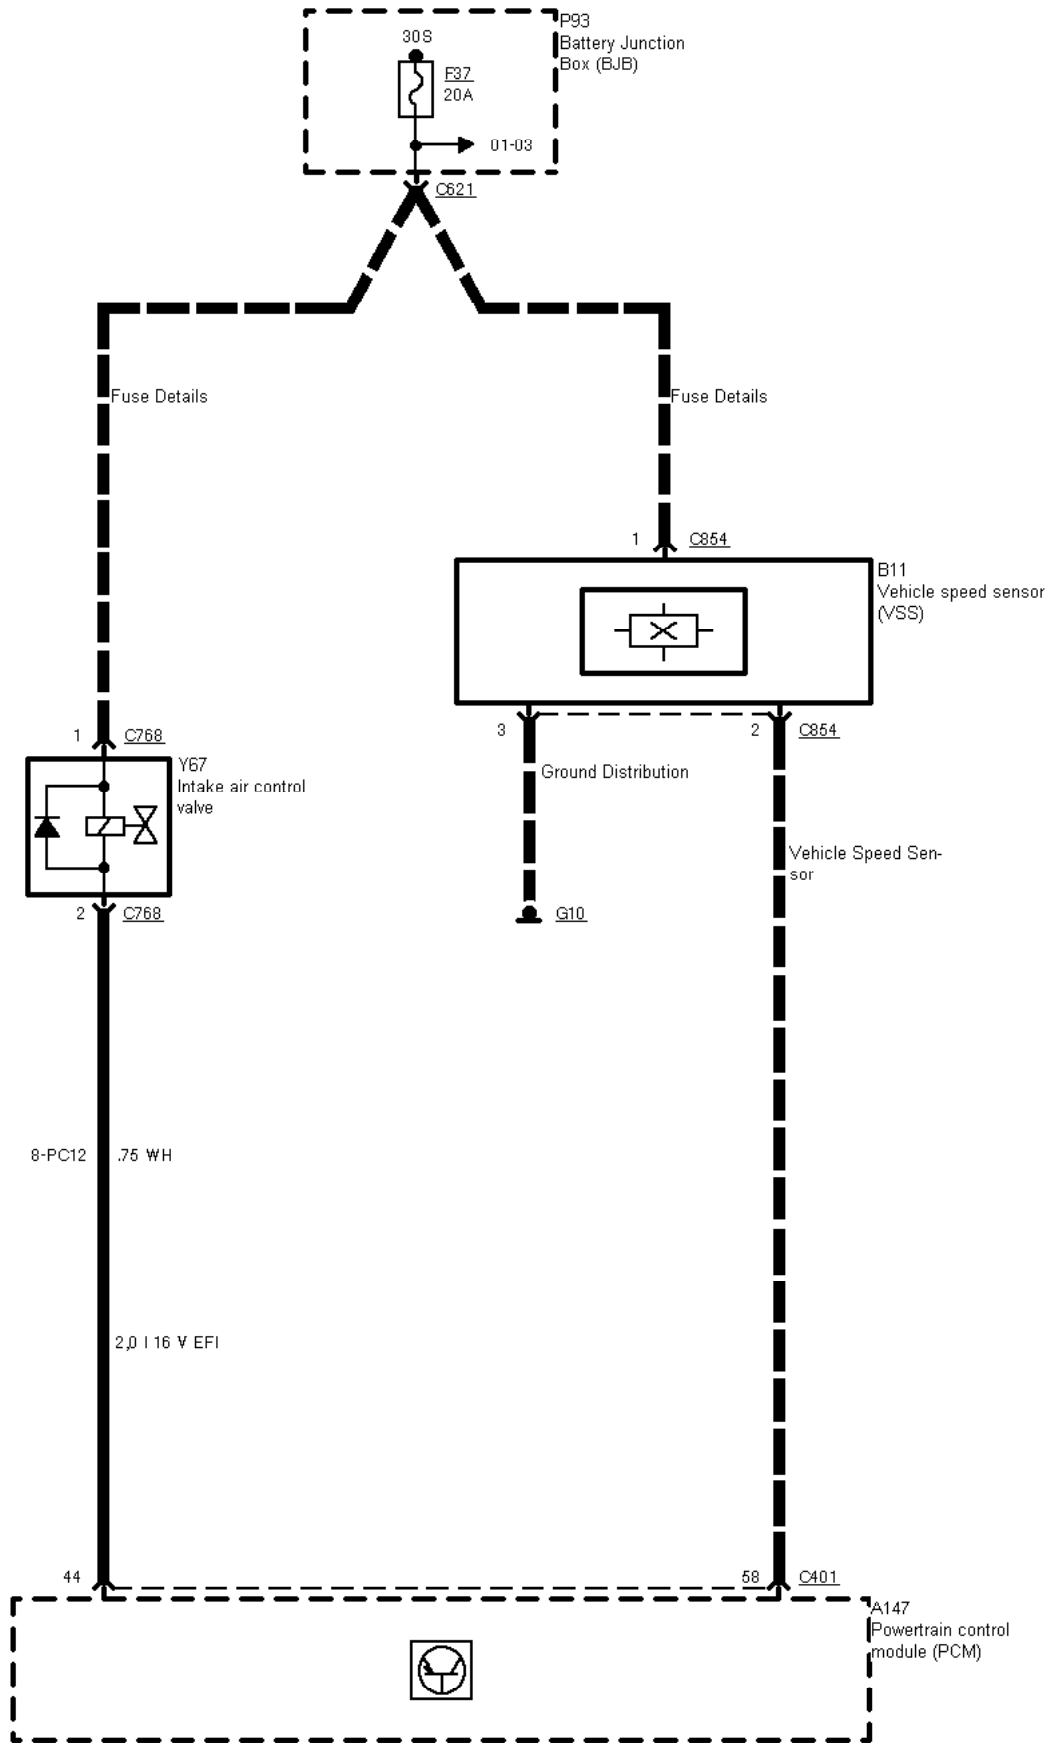


29-02-011 , Engine Control 2,0 I 8V/16V EFI (Manual Transmission) , As of 03/96

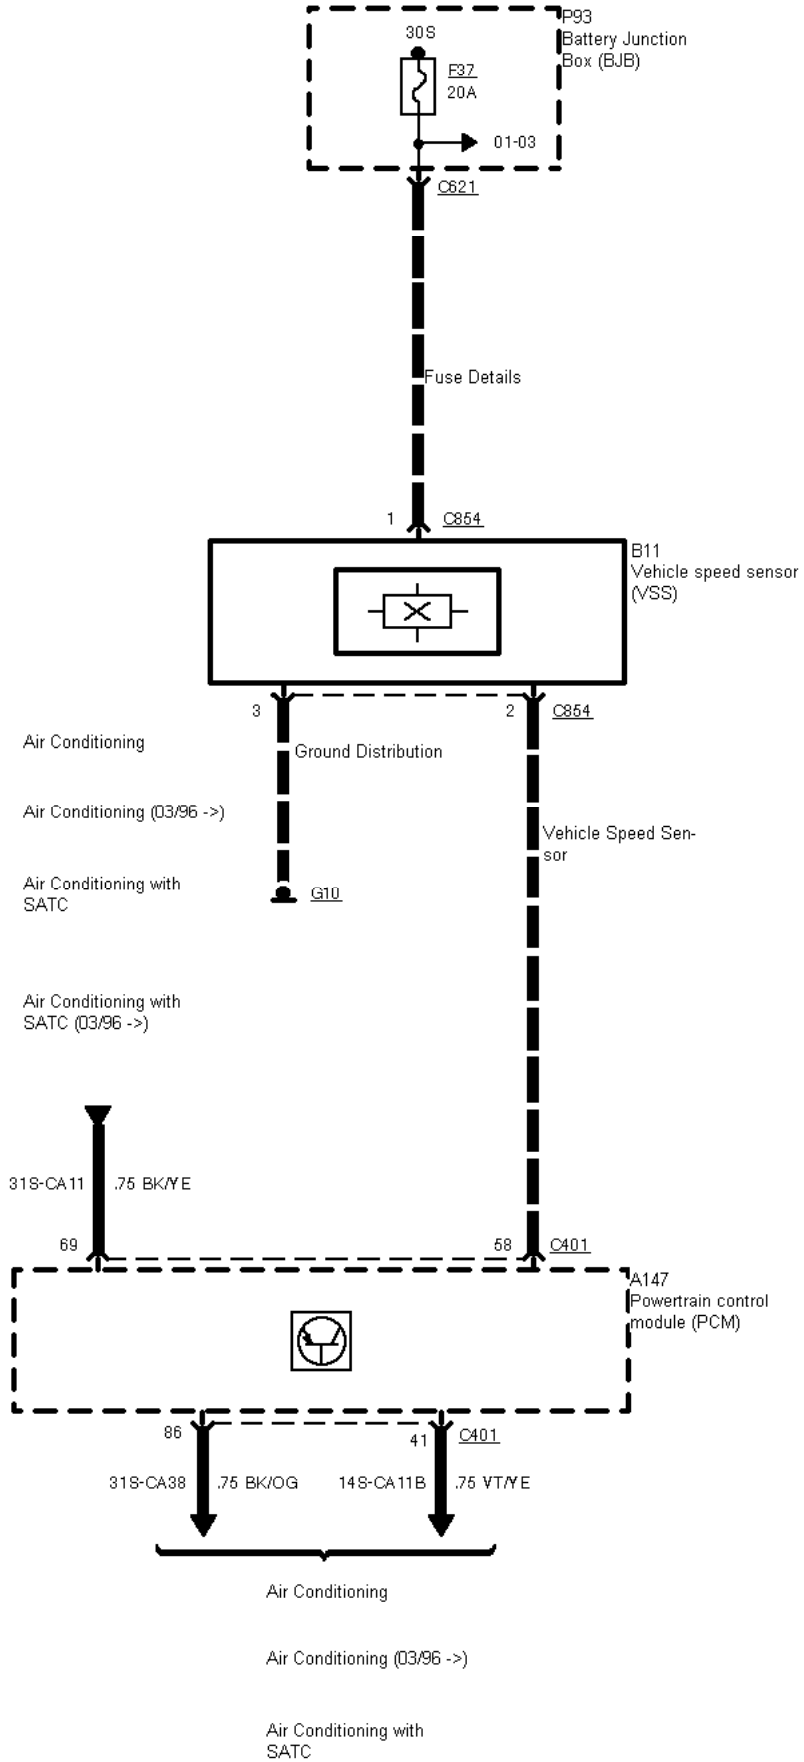


Air Conditioning with
SATC (03/96 ->)


29-02-012 , Engine Control 2,0 I 8V/16V EFI (Manual Transmission)

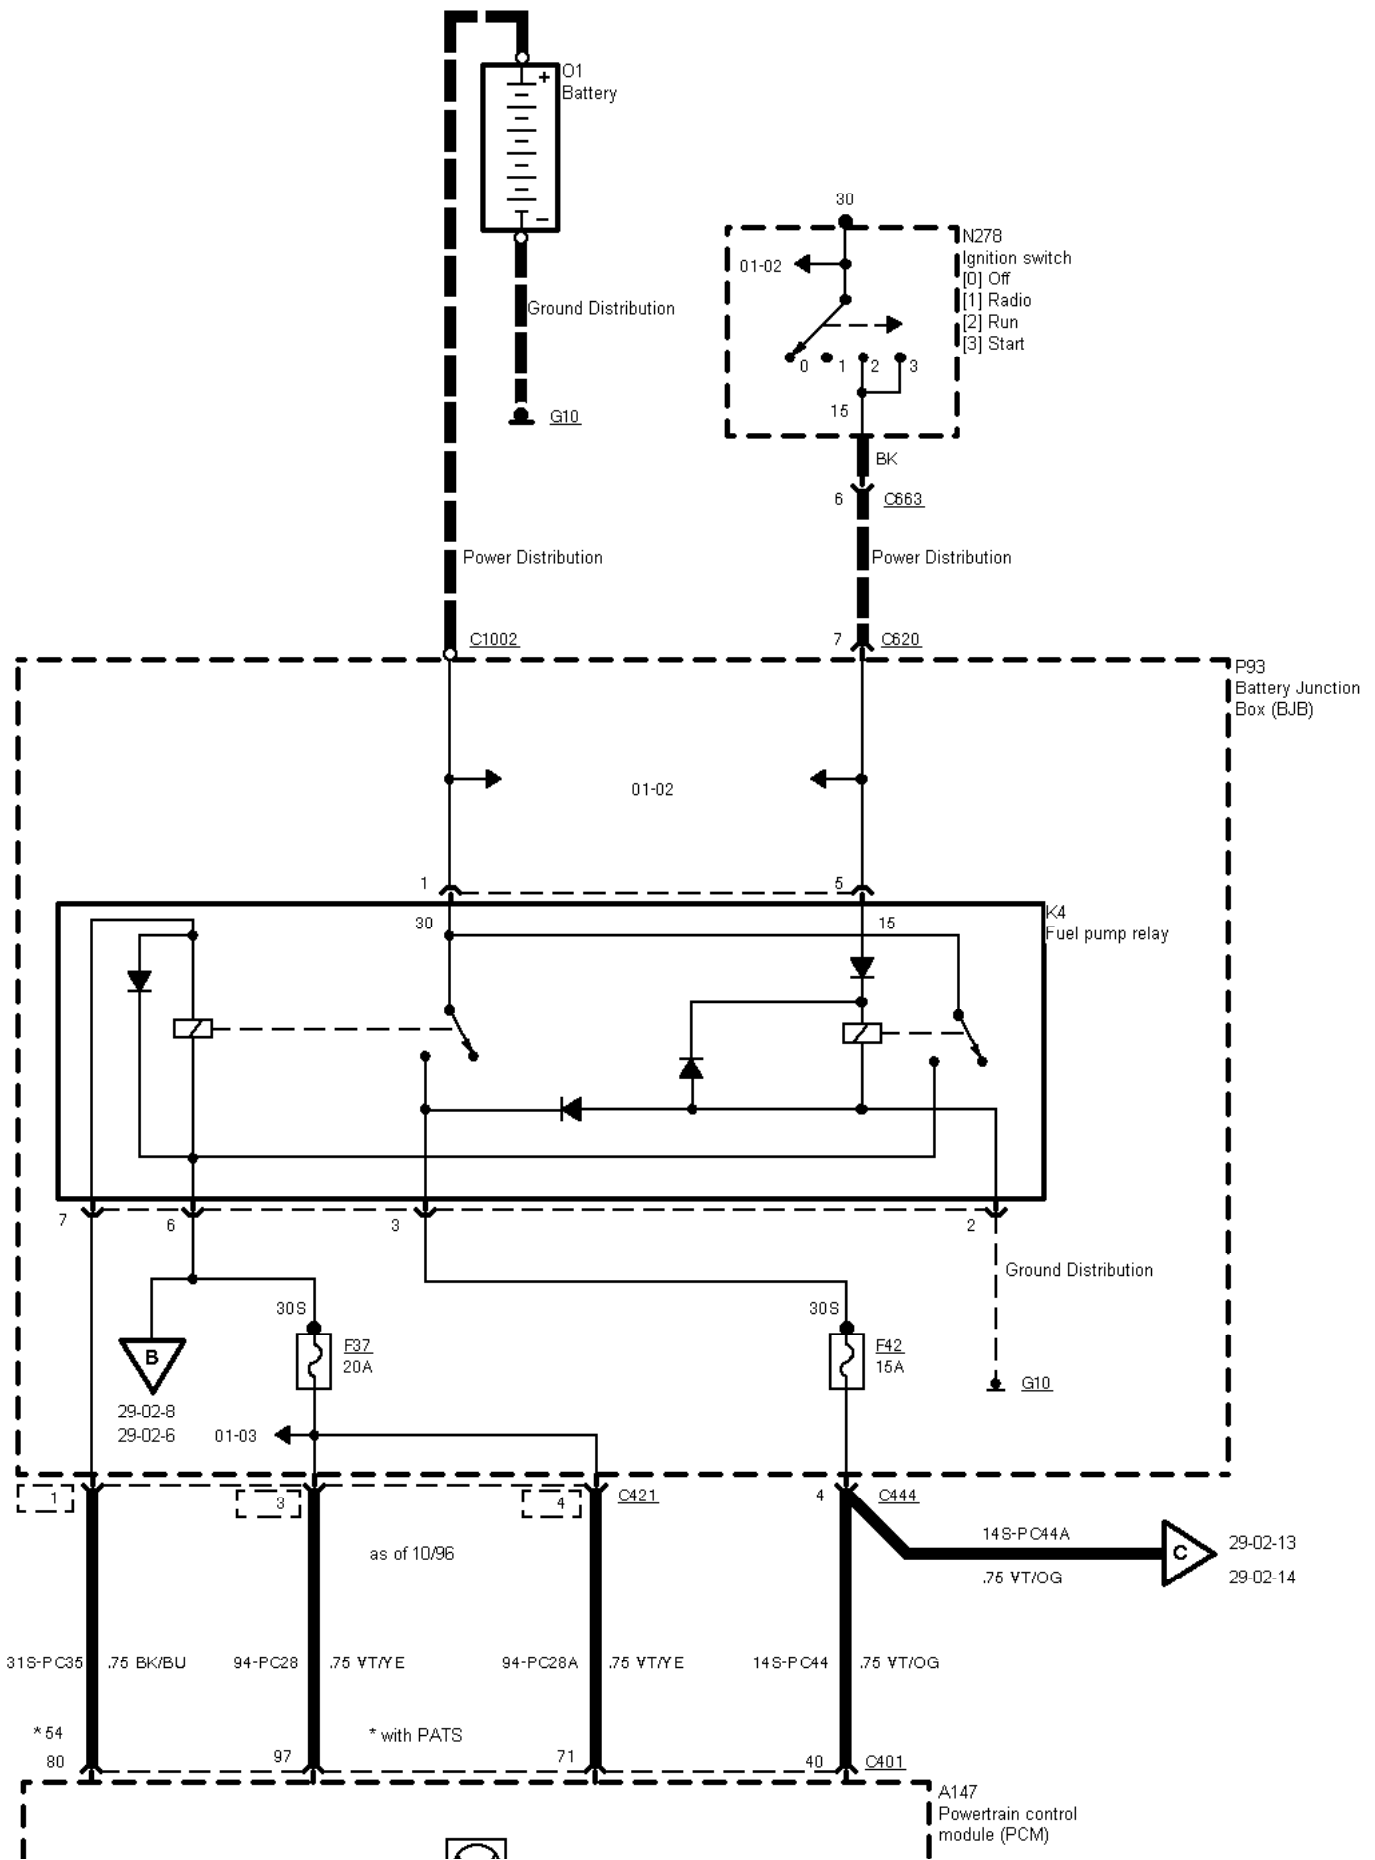






29-02-013 , Engine Control 2,0 I 8V/16V EFI (Manual Transmission) , Before 03/96

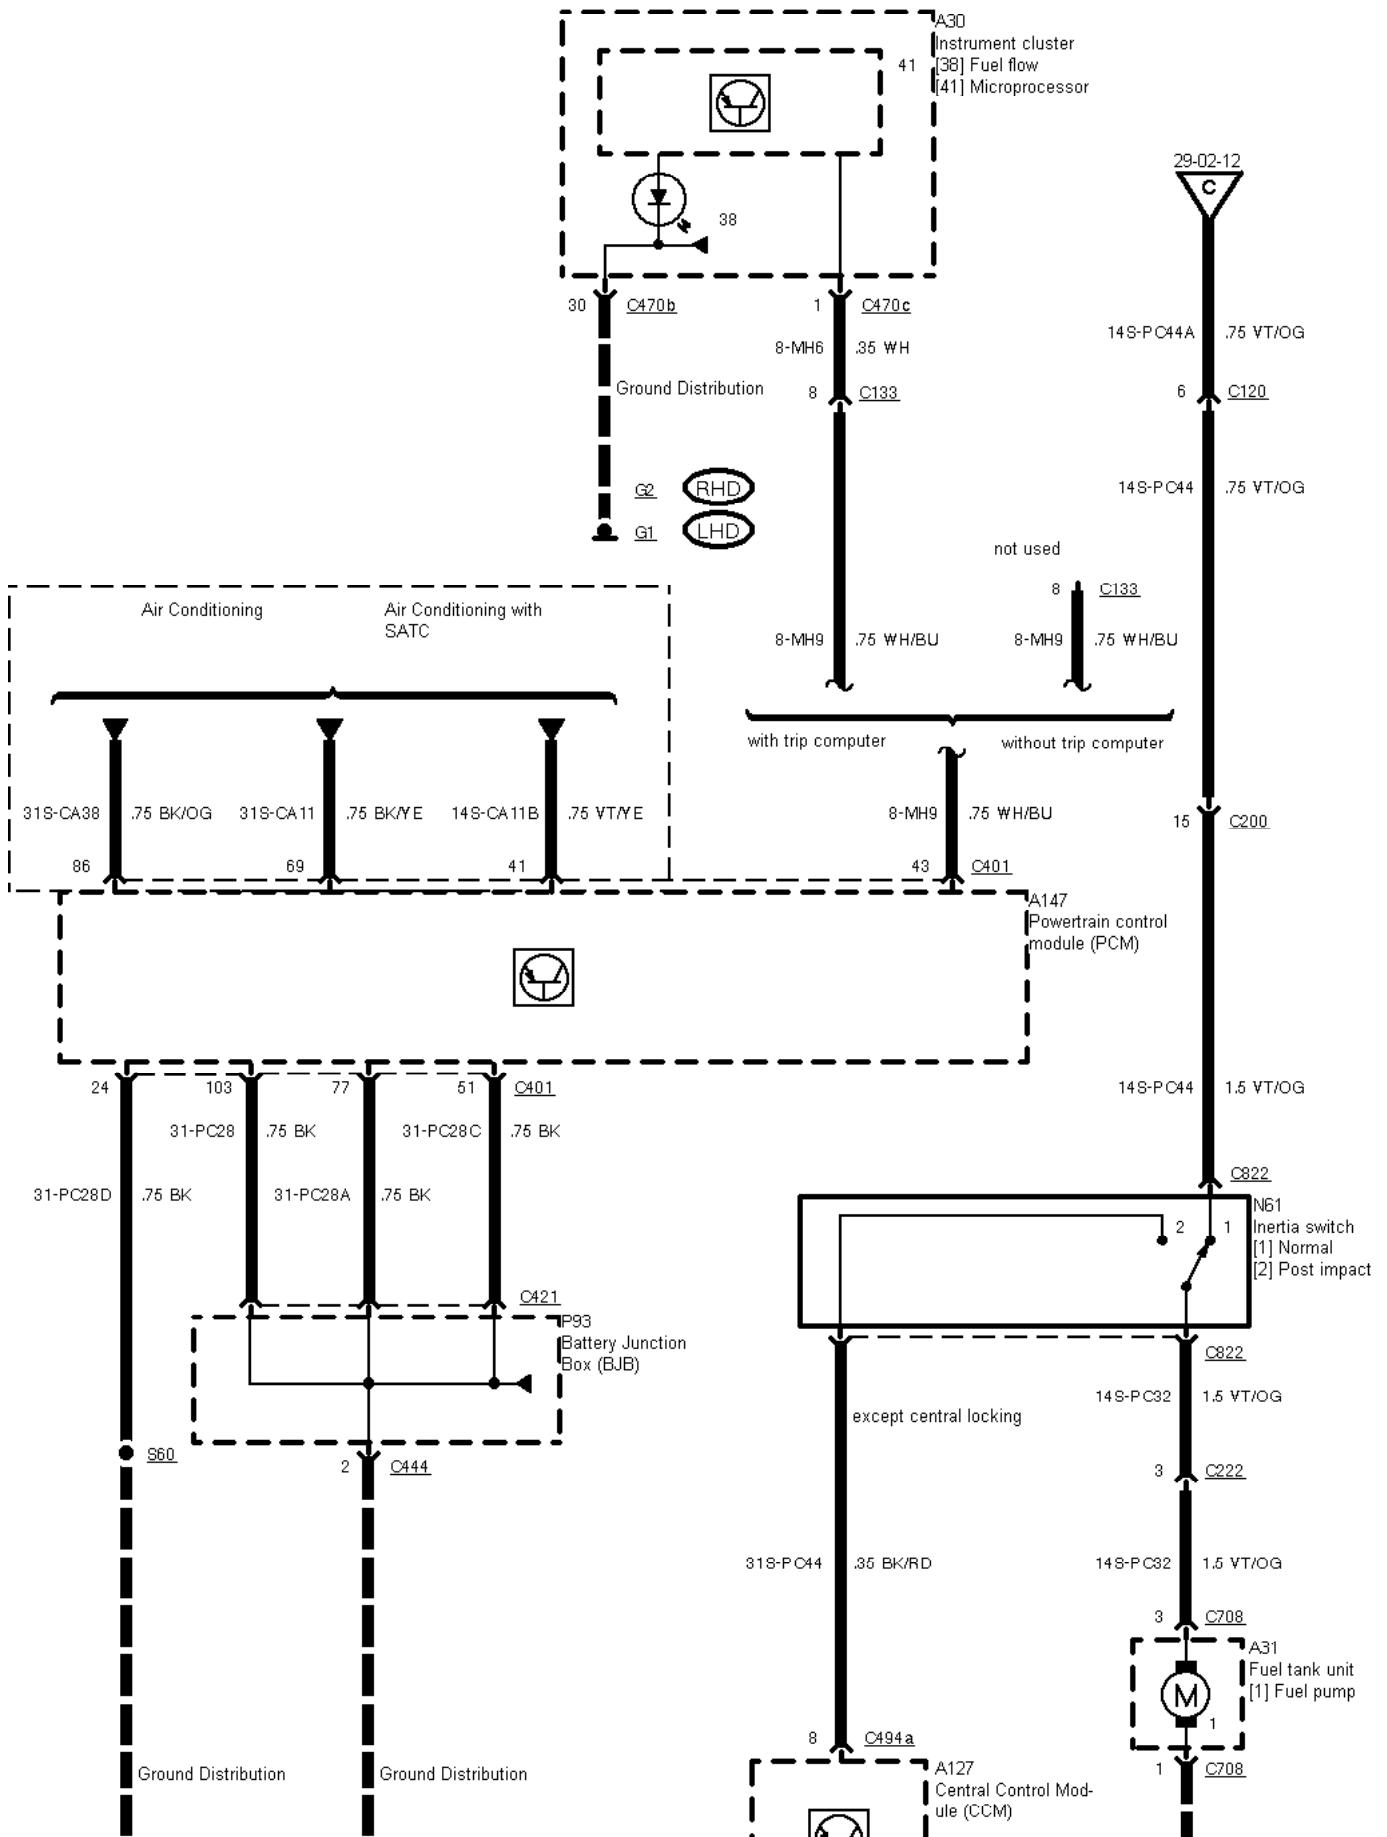

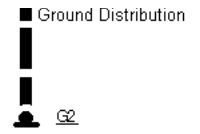


 29-02-014 , Engine Control 2,0 I 8V/16V EFI (Manual Transmission) , As of 03/96

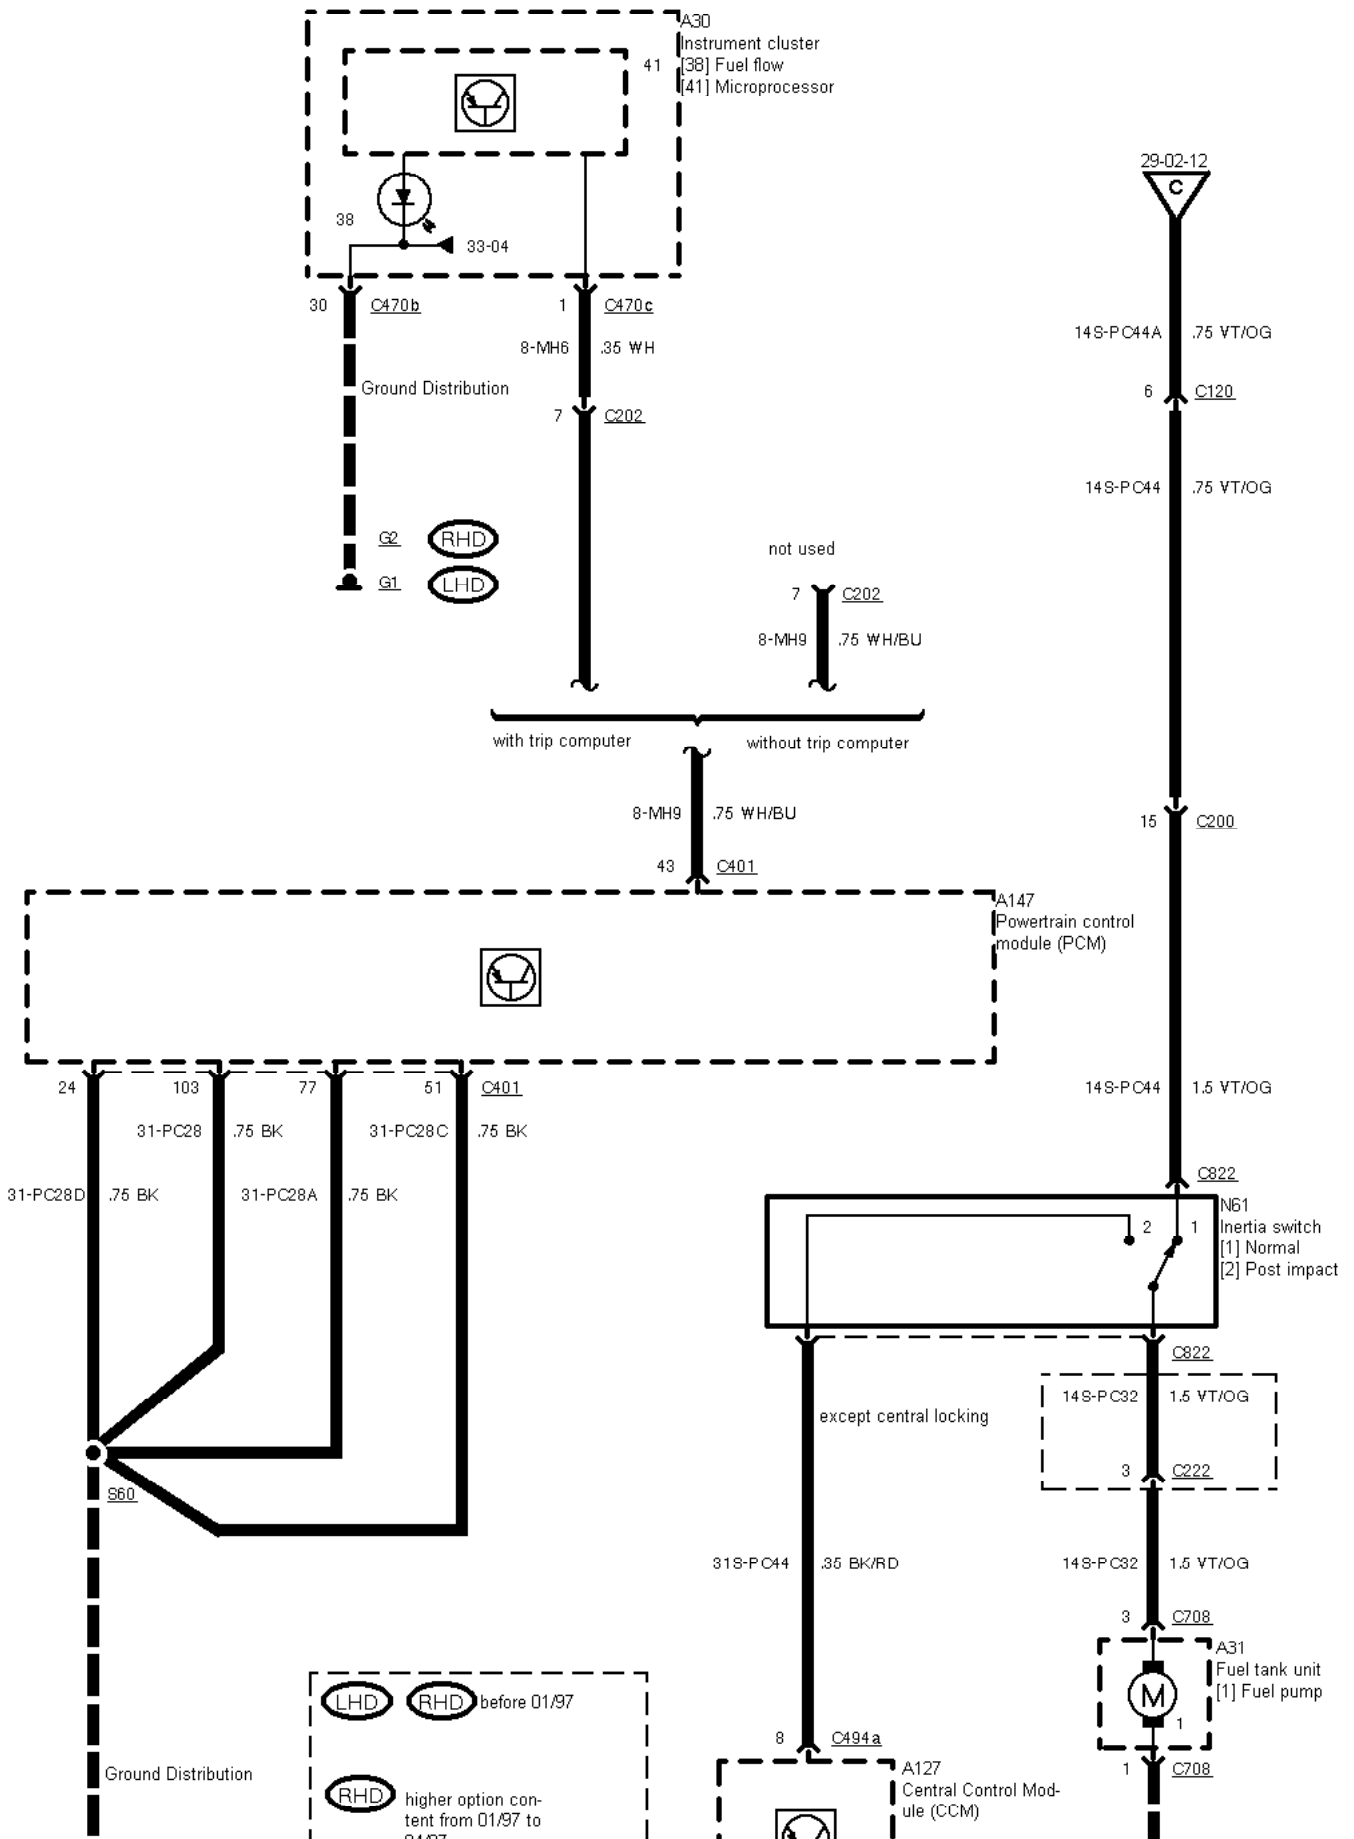

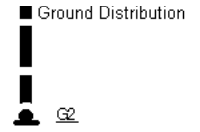

29-02-015 , Engine Control 2,0 I 8V/16V EFI (Manual Transmission) , Engine cooling fan

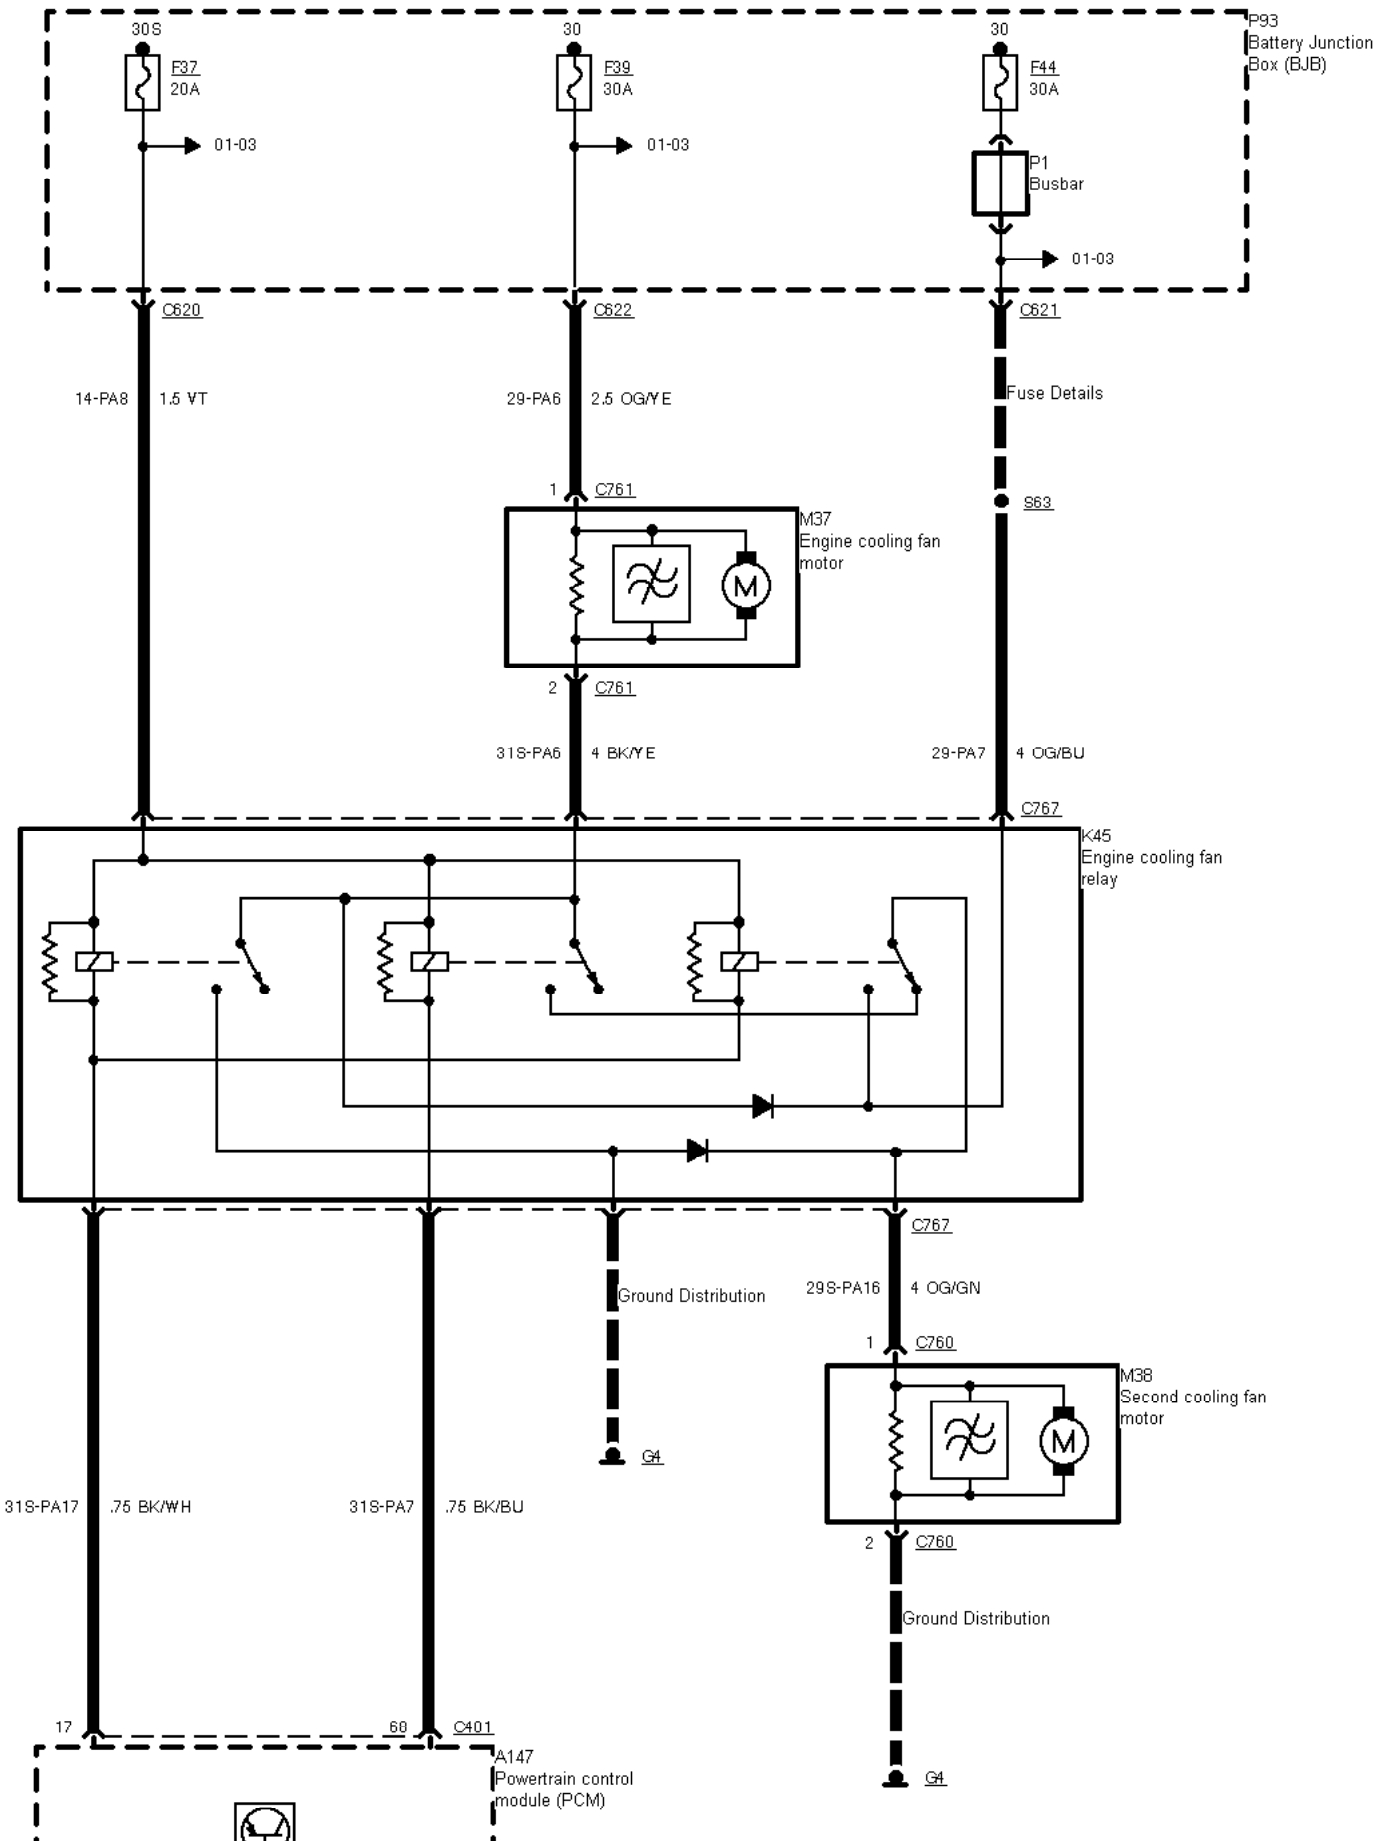



2 Circuit Description
