


---

17-01-001 , Instrument Interface Control , Manual transmission, except LHD low series version and TCI Diesel as of 10/96

---

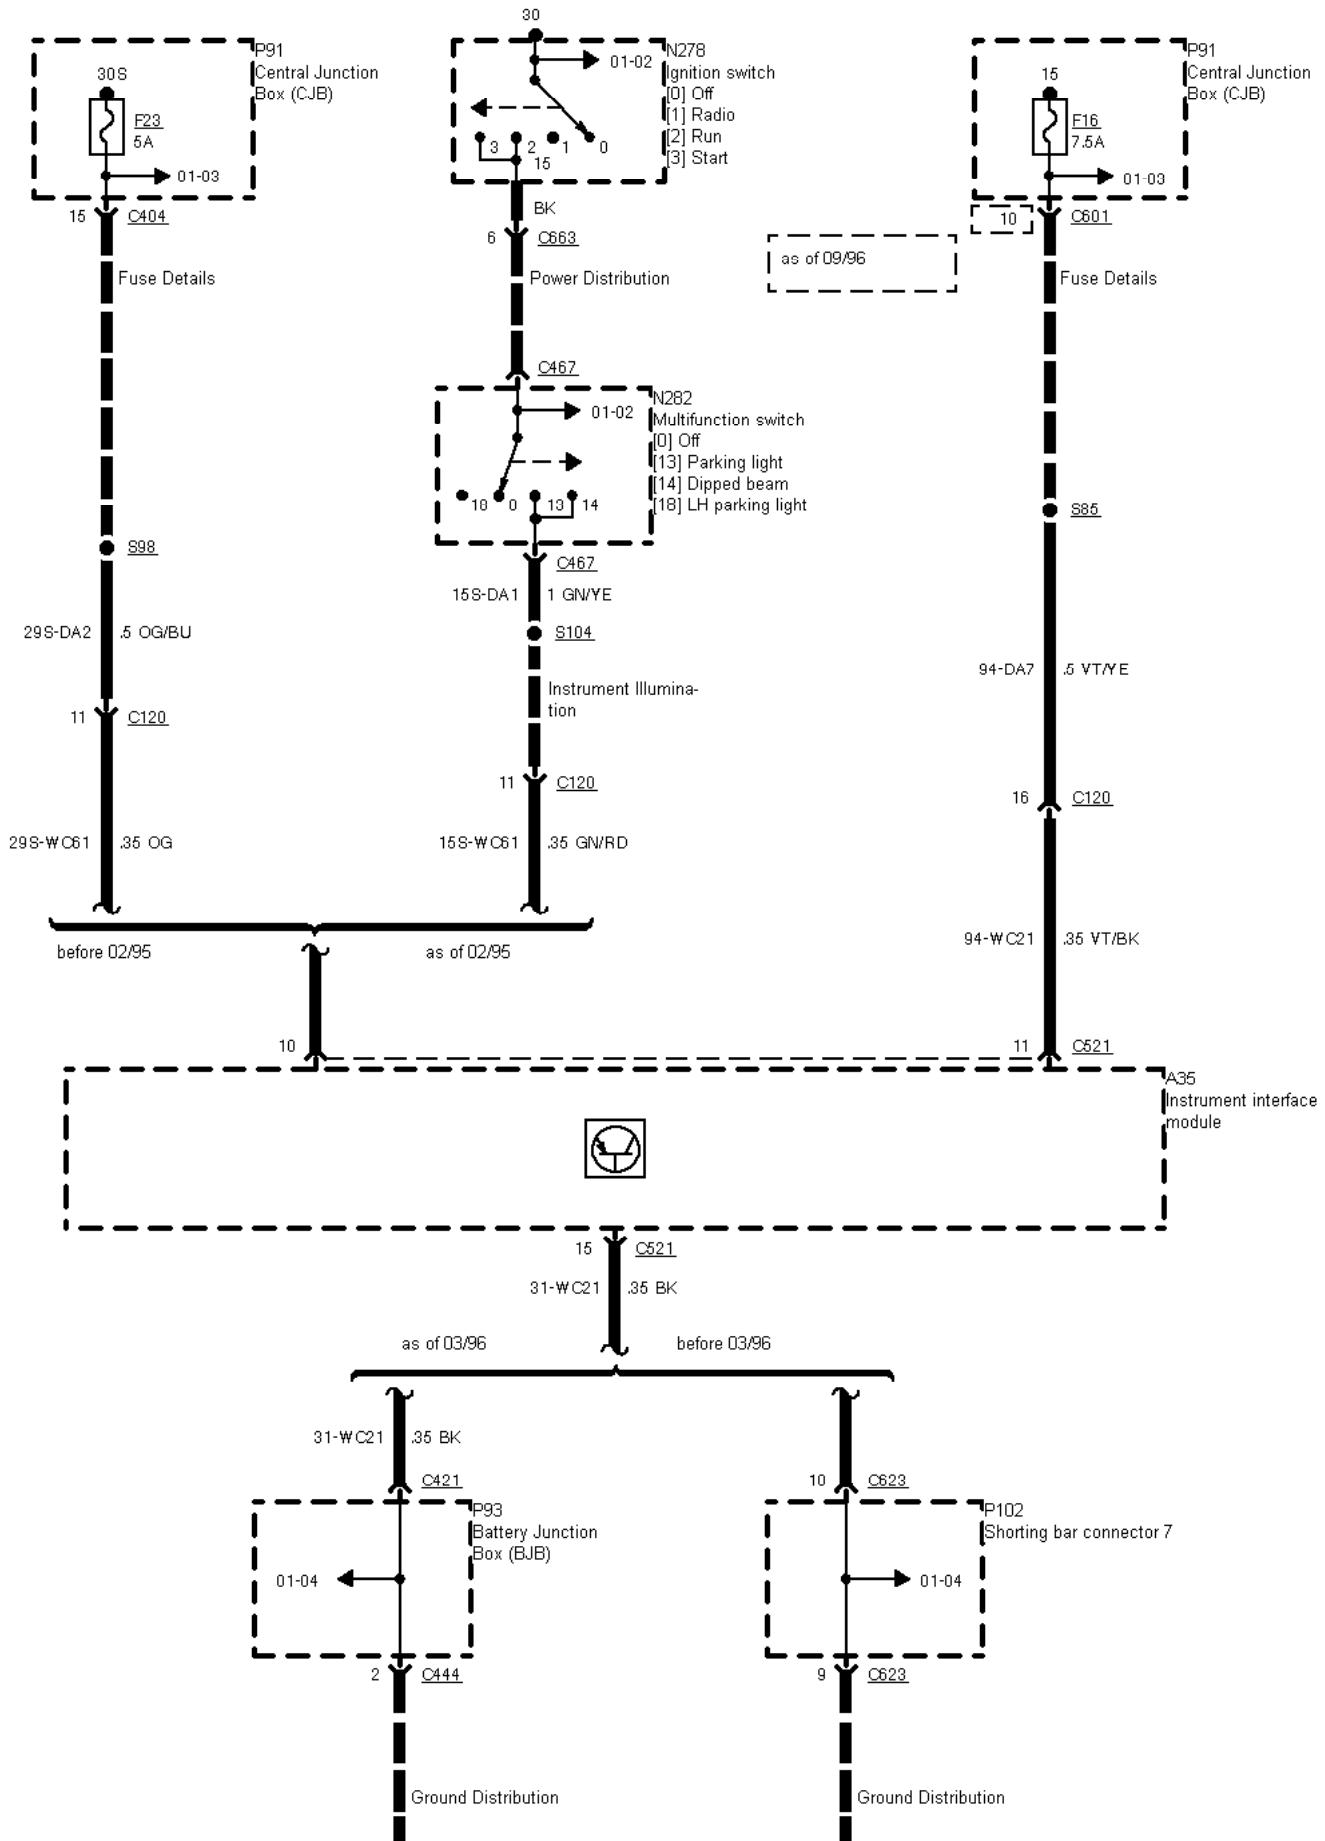






---

**17-01-002 , Instrument Interface Control , Manual transmission, except LHD low series version and TCI Diesel as of 10/96**

  ---

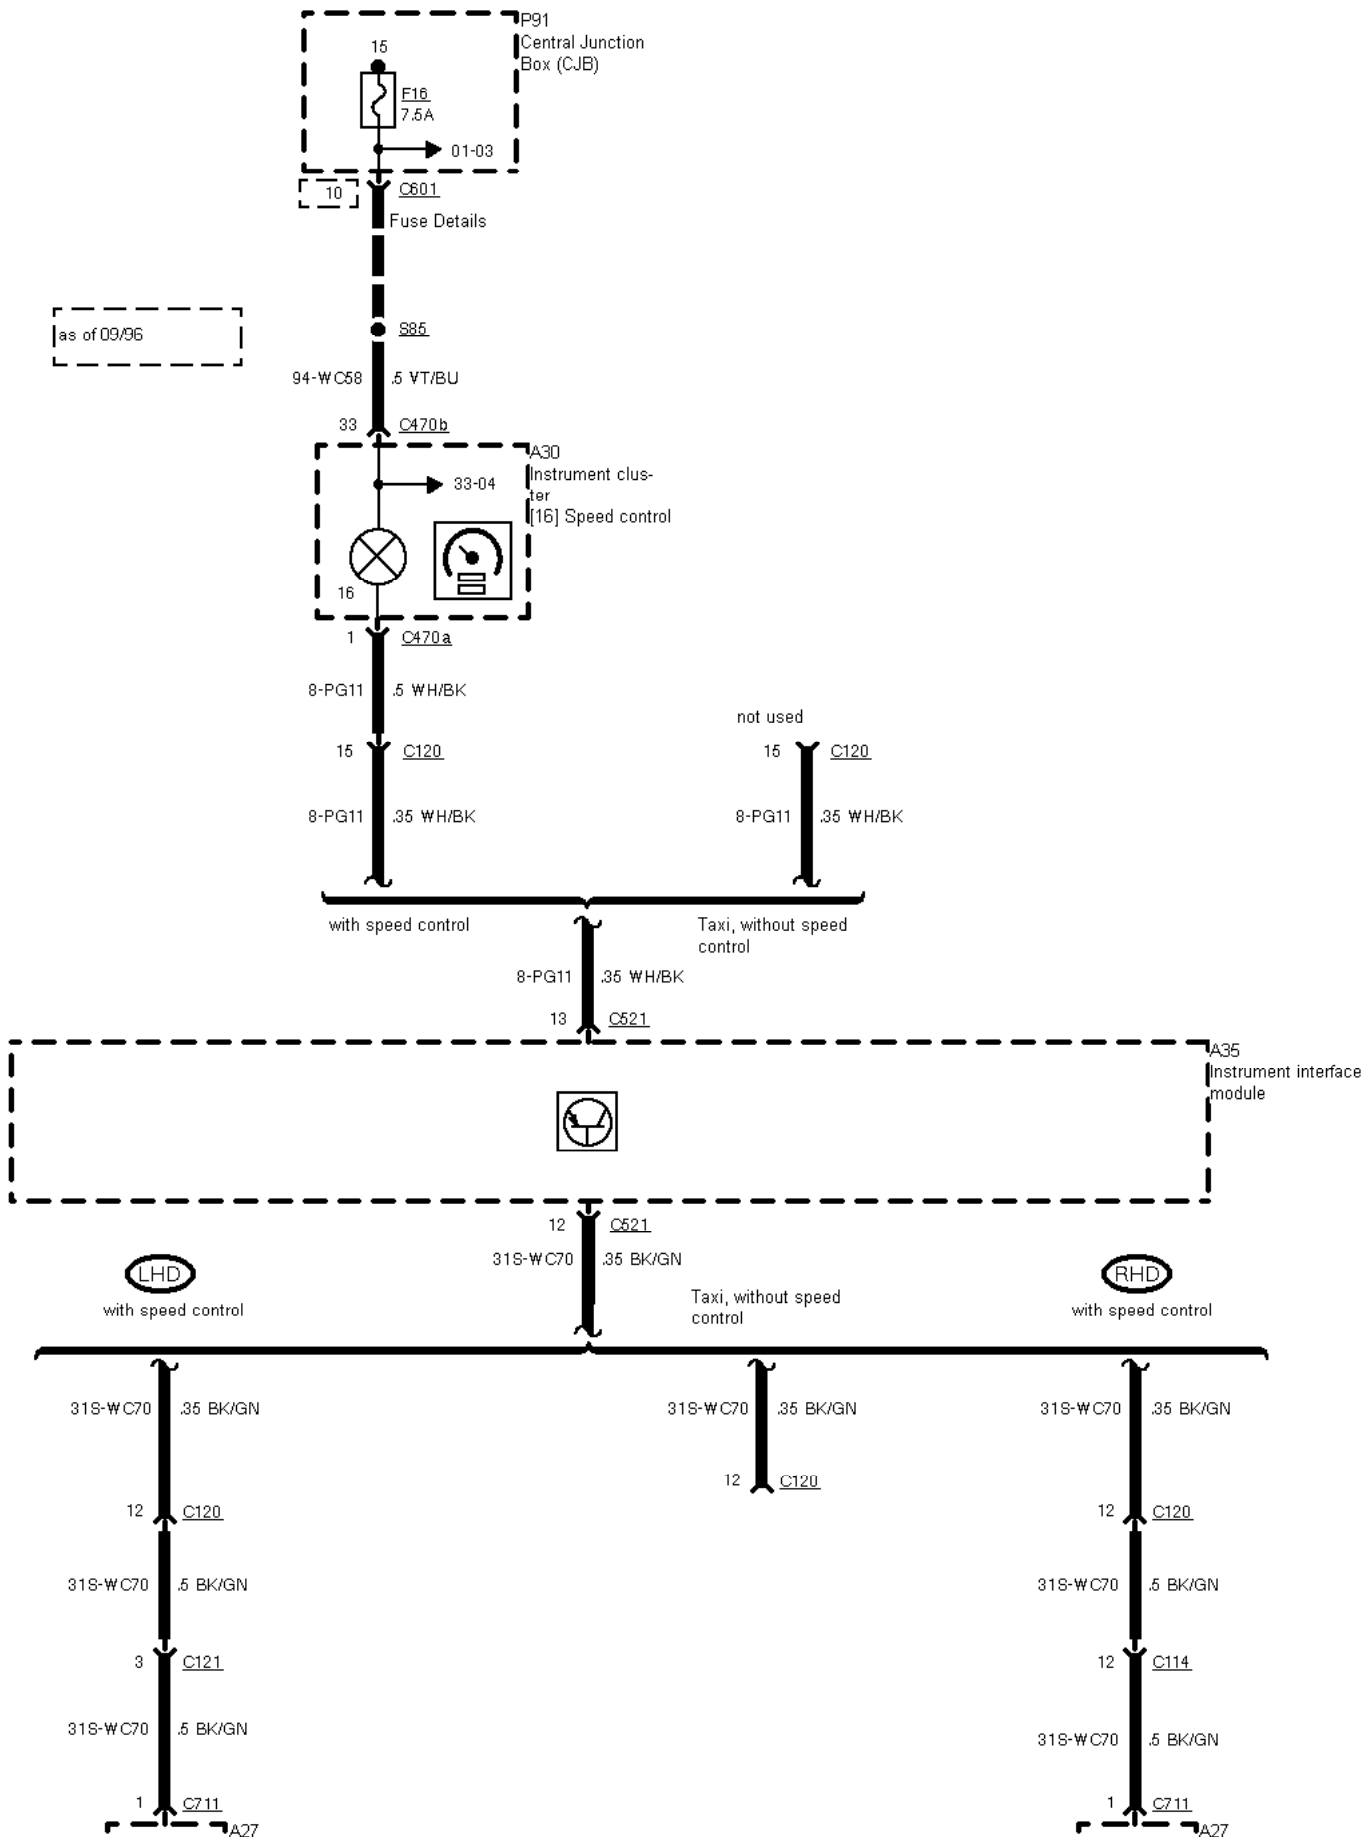






---

17-01-003 , Instrument Interface Control , 2,9 I V6 12V

  ---

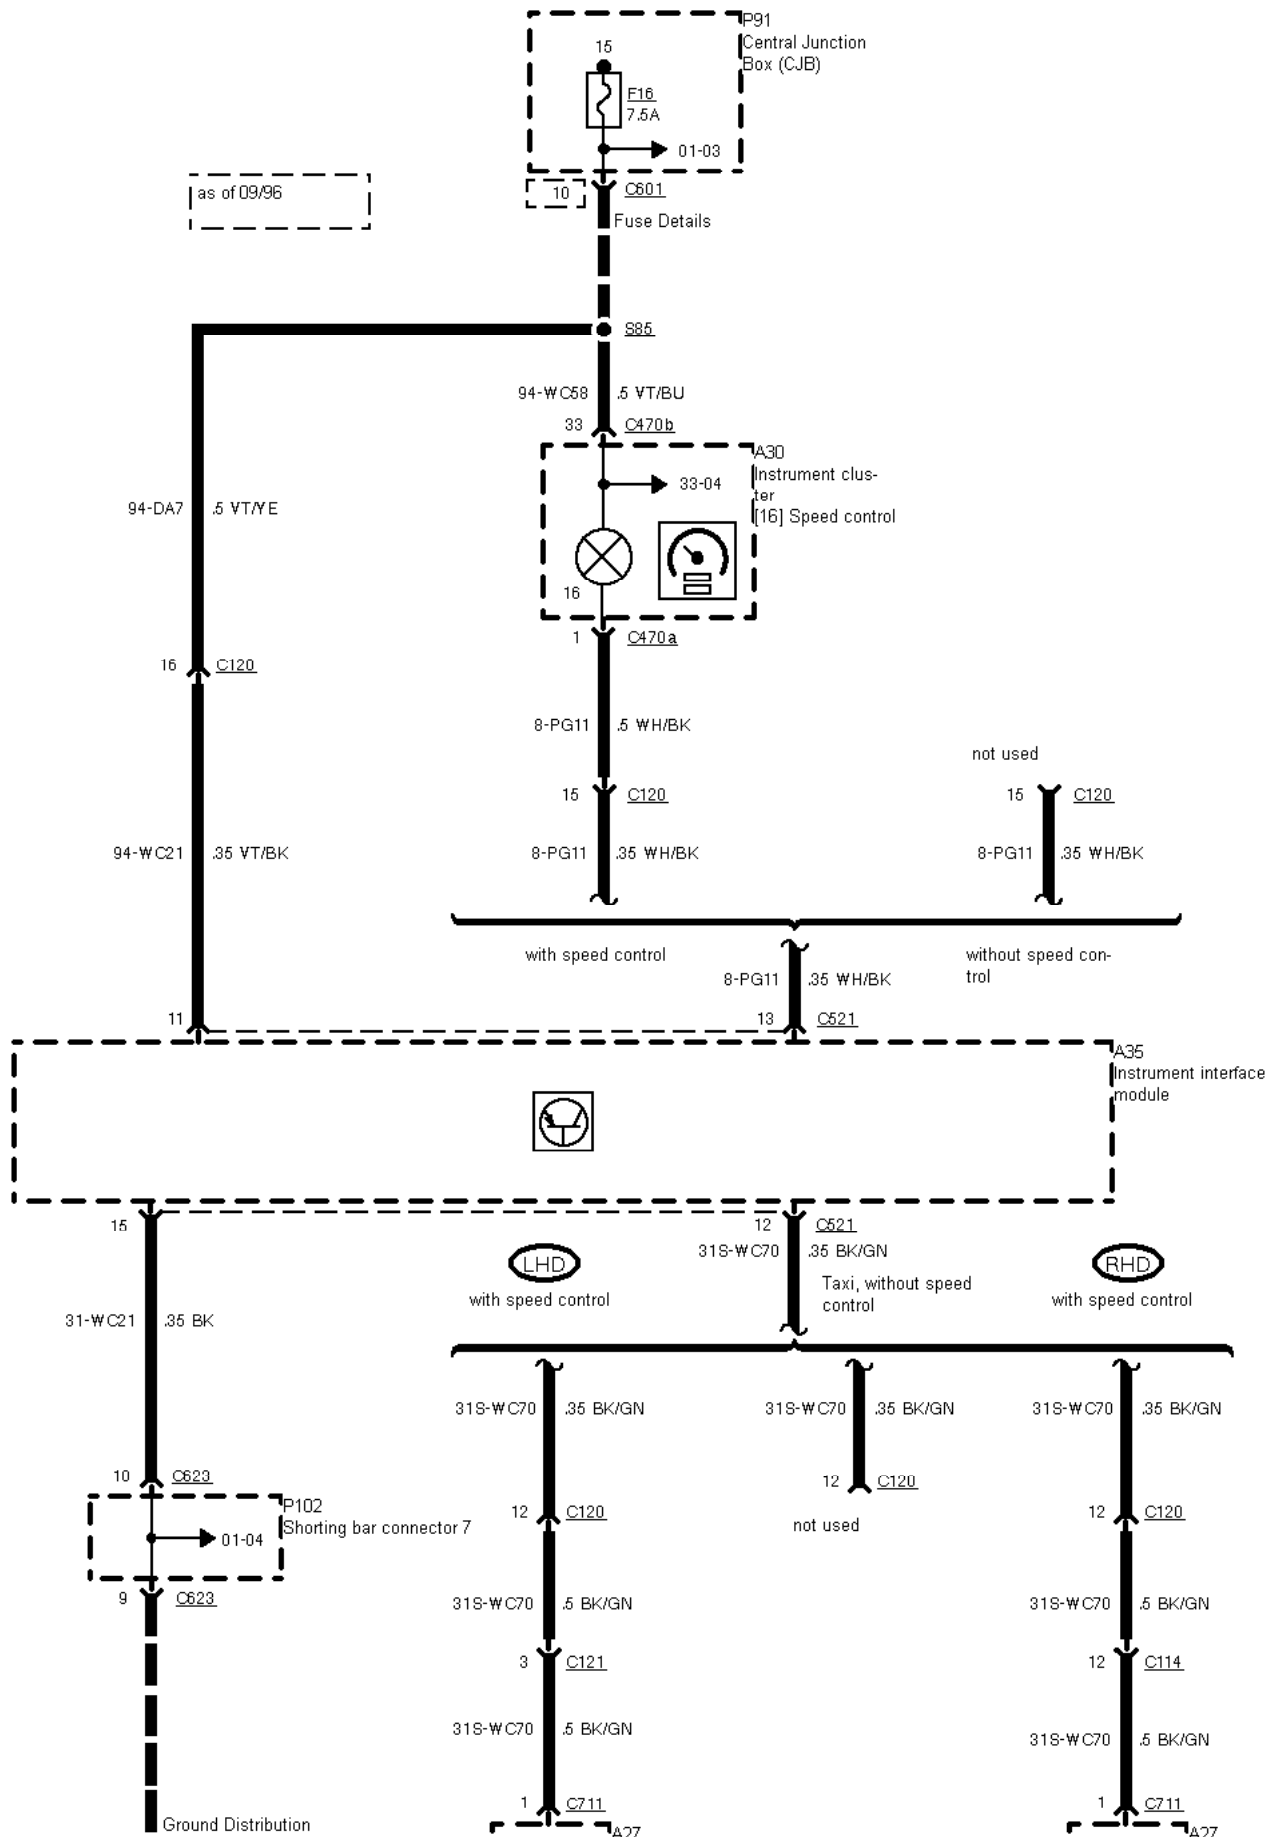





---

17-01-004 , Instrument Interface Control , 2,9 l V6 12V

---

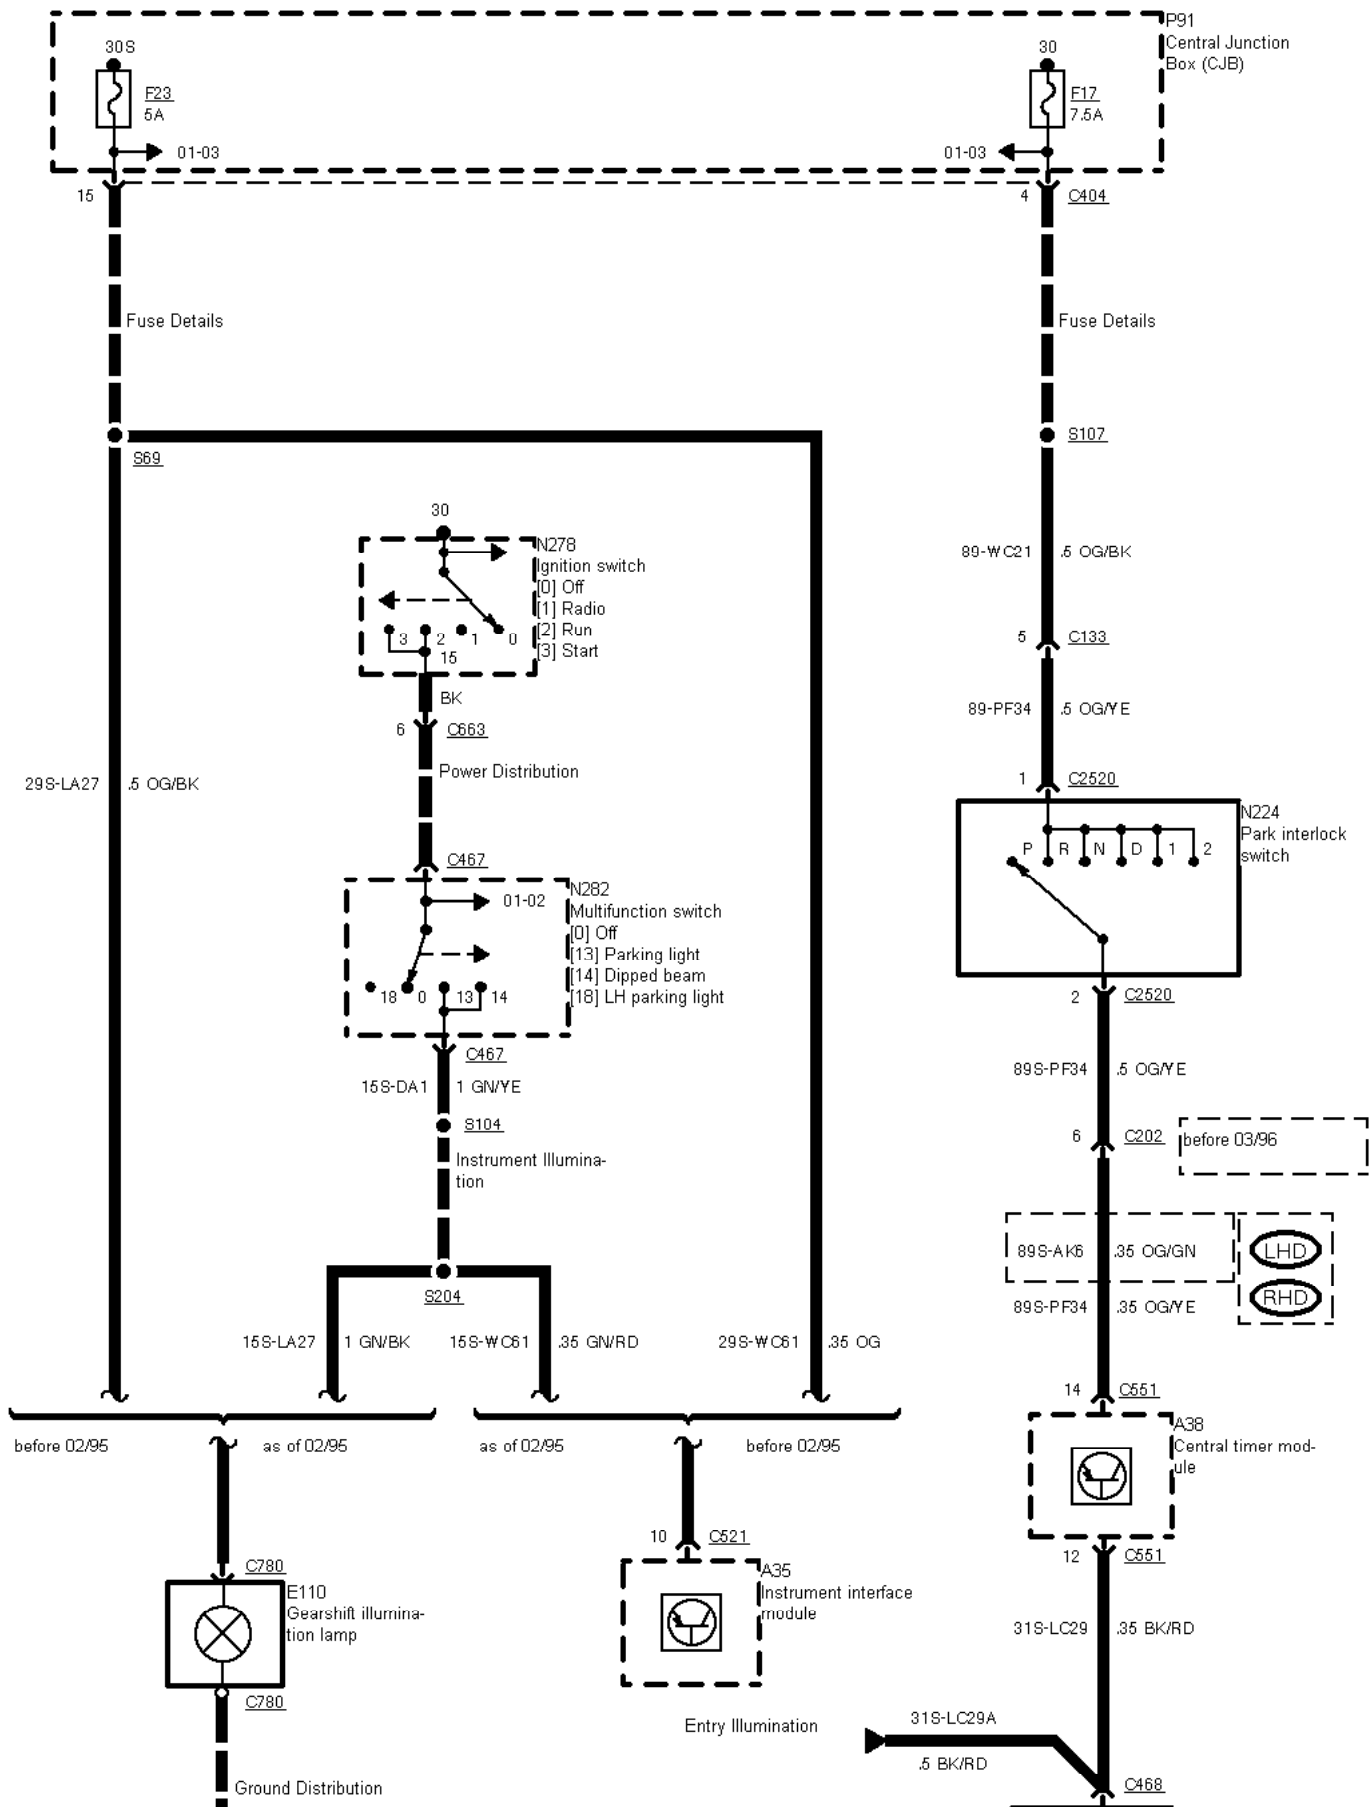




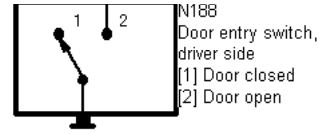

---

17-01-005 , Instrument Interface Control , Automatic transmission, except 2,9 I V6 12V Before 02/95


---

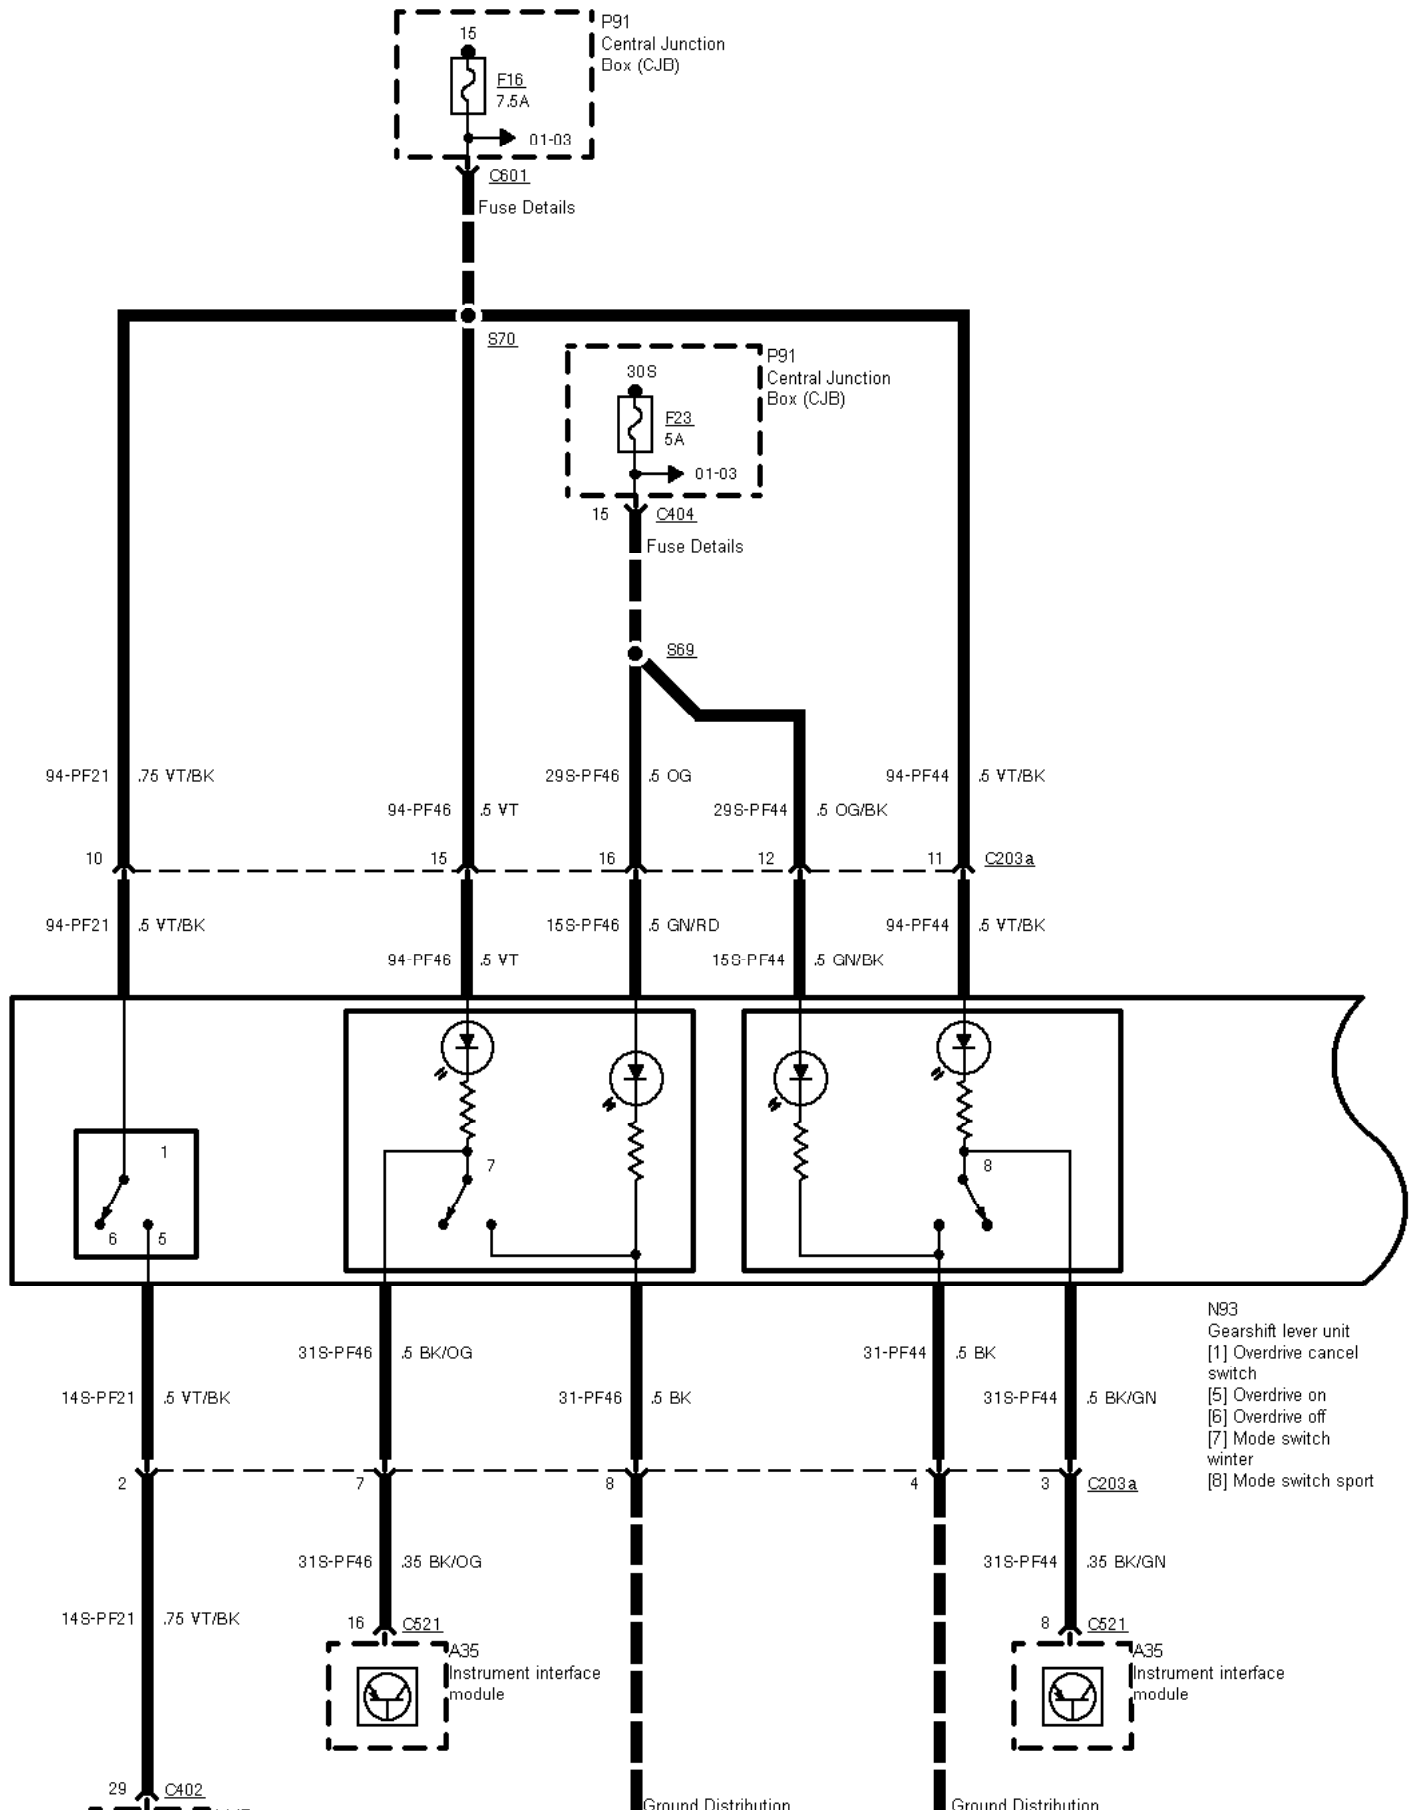

N93  
Gearshift lever unit  
[1] Overdrive cancel  
switch  
[5] Overdrive on  
[6] Overdrive off  
[7] Mode switch  
winter  
[8] Mode switch sport

Ground Distribution

 
Ground Distribution





---

17-01-006 , Instrument Interface Control , Automatic transmission, except 2,9 I V6 12V Before 02/95

 ---

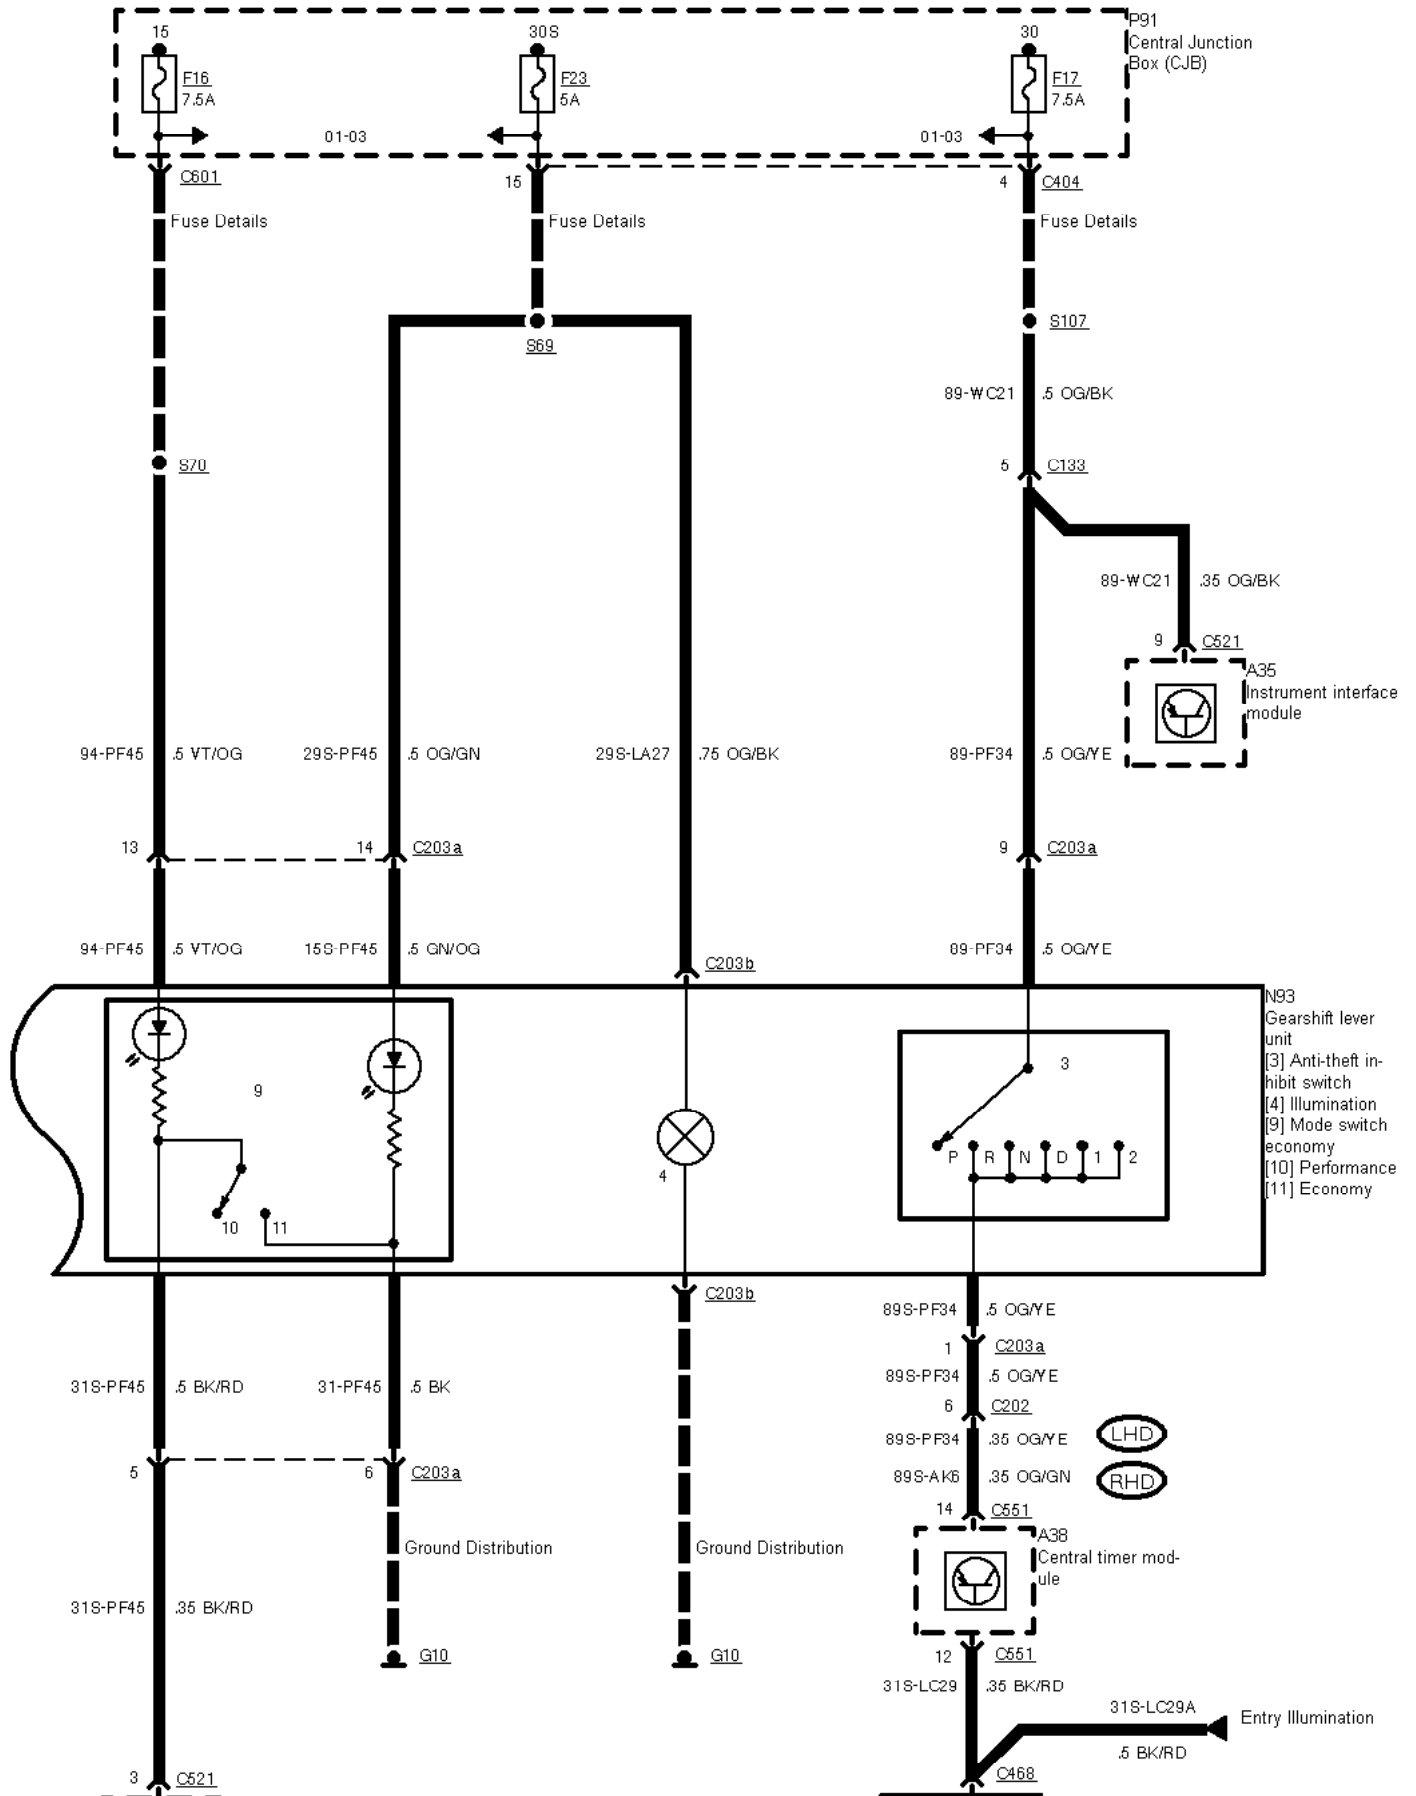


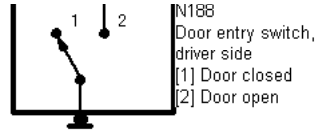



---

17-01-007 , Instrument Interface Control , Automatic transmission, except 2,9 I V6 12V As of 02/95

---

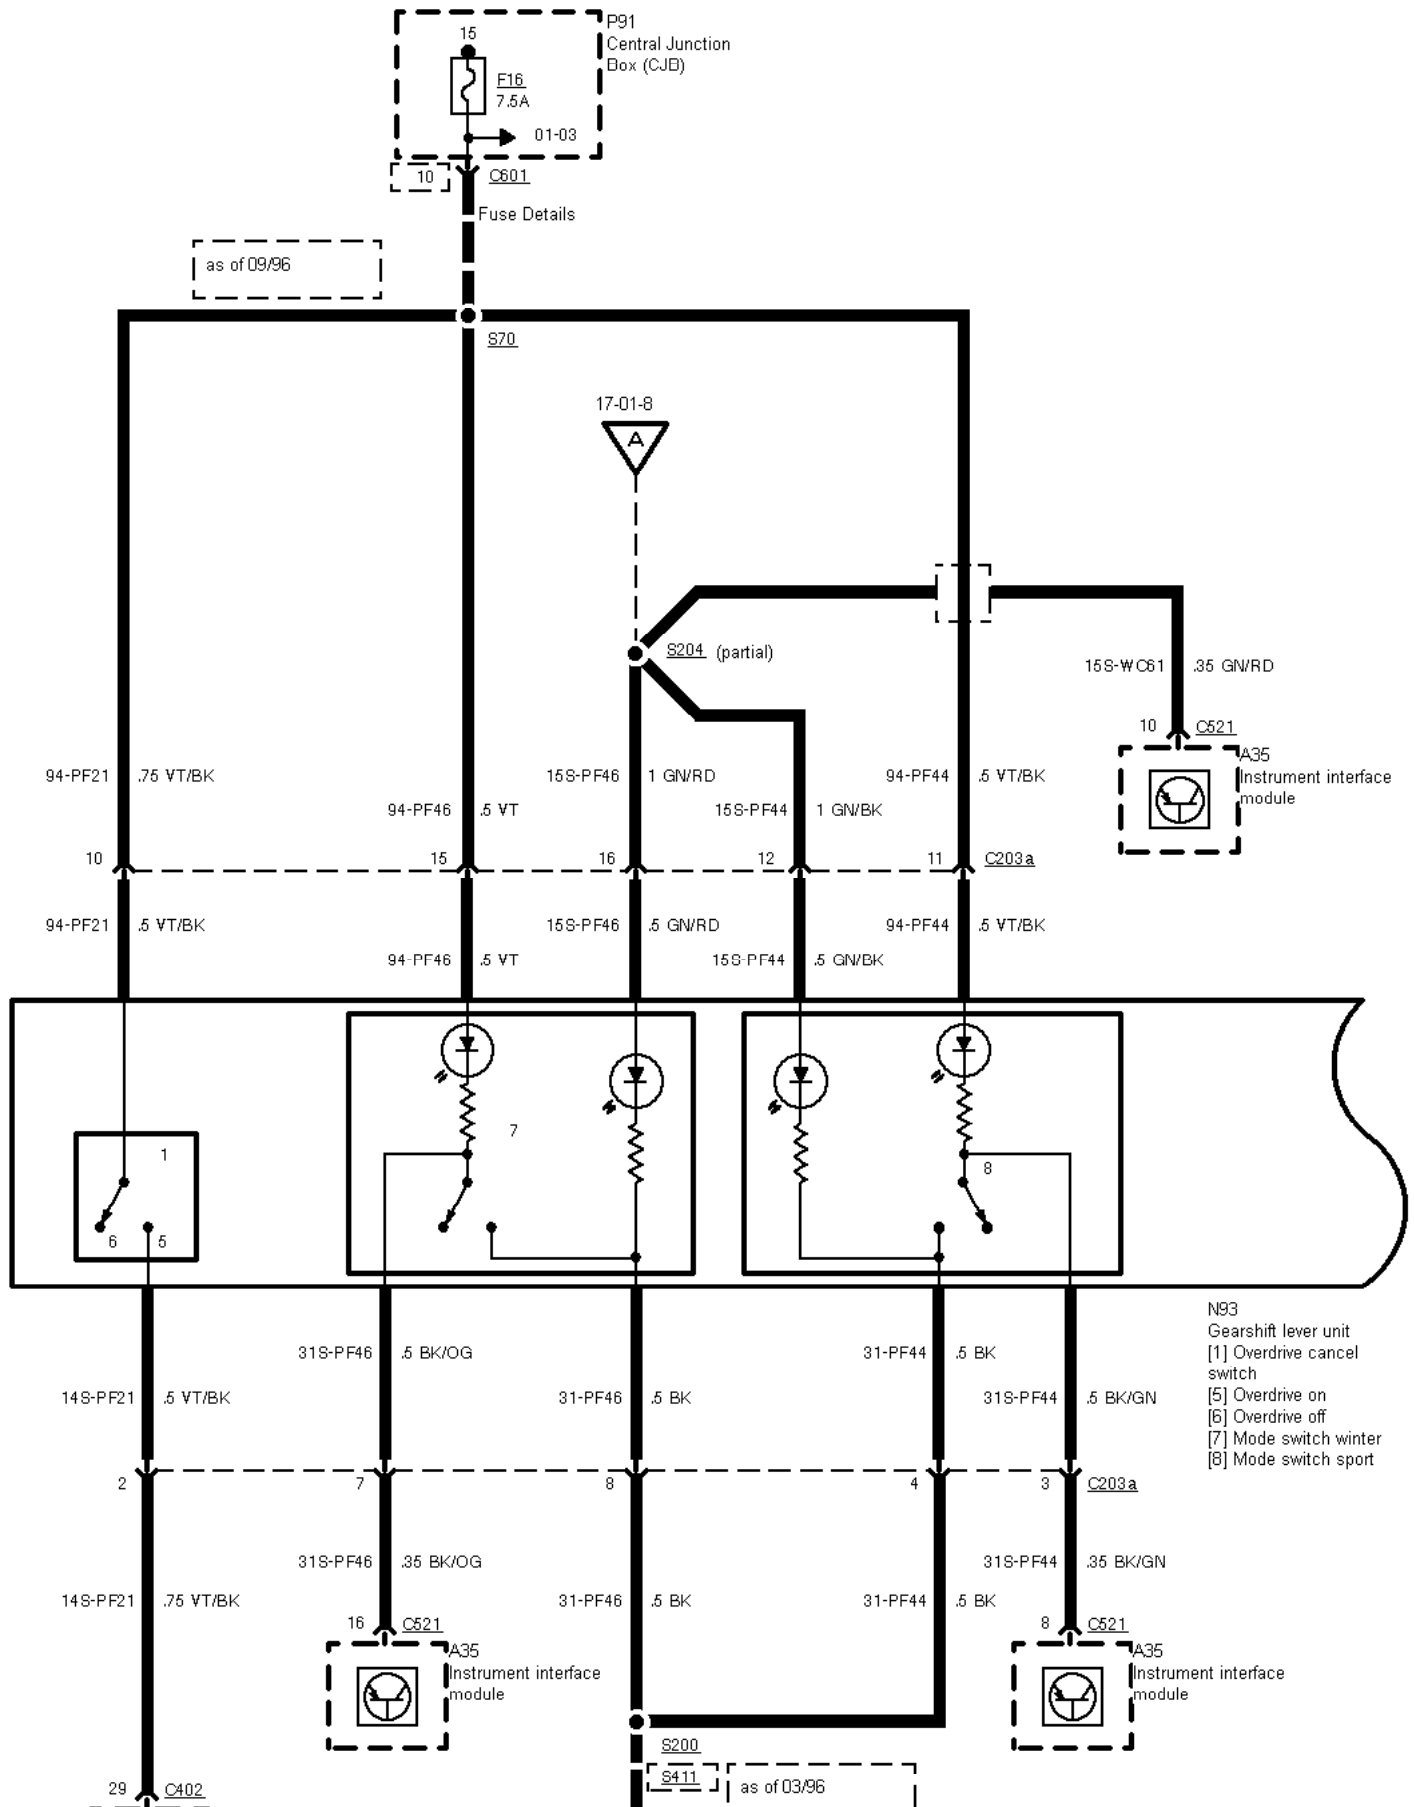

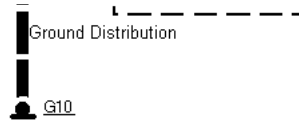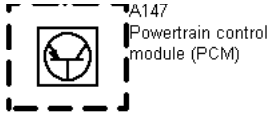



---

17-01-008 , Instrument Interface Control , Automatic transmission, except 2,9 I V6 12V As of 02/95

 ---






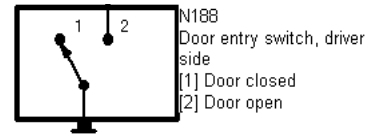



---

17-01-009 , Instrument Interface Control , Automatic transmission except 2,9 I V6 12V

---



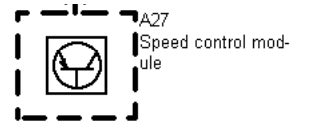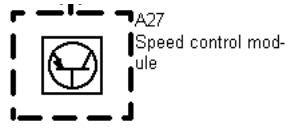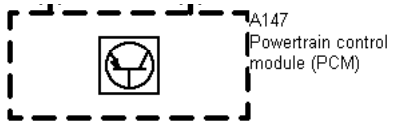

---

17-01-010 , Instrument Interface Control , TCI Diesel automatic transmission as of 11/97

---

