



---

43-02-001 , Power Mirrors with Module , Without memory


---

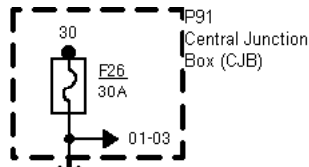




Fuse Details

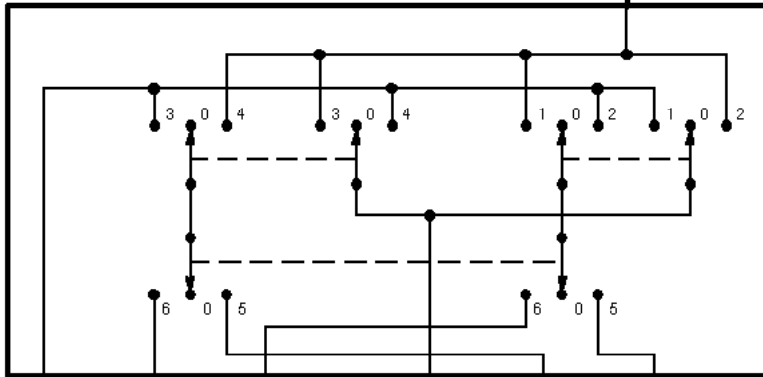


N193  
Power mirror adjust  
switch  
[0] Rest  
[1] Up  
[2] Down  
[3] Left  
[4] Right  
[5] Passenger side  
mirror  
[6] Driver side mir-  
ror

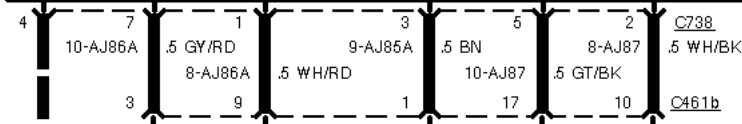

10-AJ86A .5 GY/RD 9-AJ85A .5 BN 8-AJ87 .5 WH/BK  
8-AJ86A .5 WH/RD 10-AJ87 .5 GT/BK

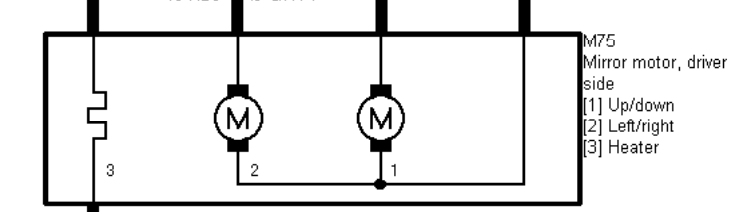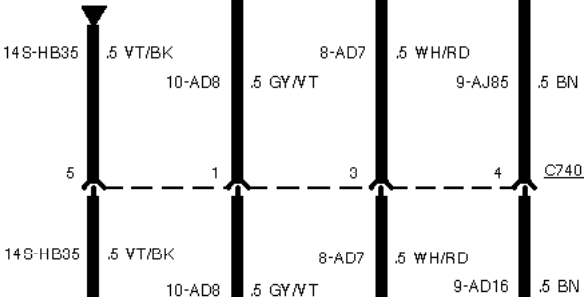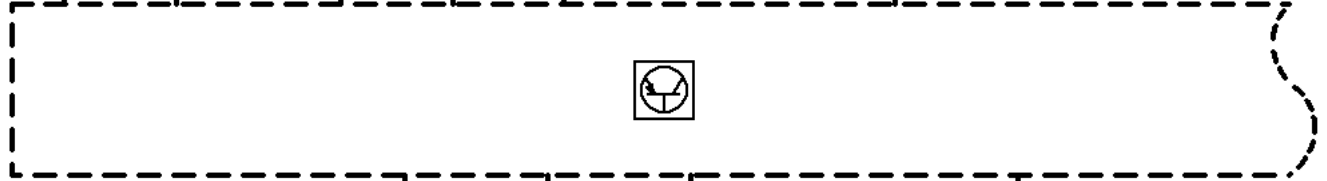

 
M75  
Mirror motor, driver  
side  
[1] Up/down  
[2] Left/right  
[3] Heater



Ground Distribution

Ground Distribution

 
Ground Distribution





---

43-02-002 , Power Mirrors with Module , Without memory

  ---

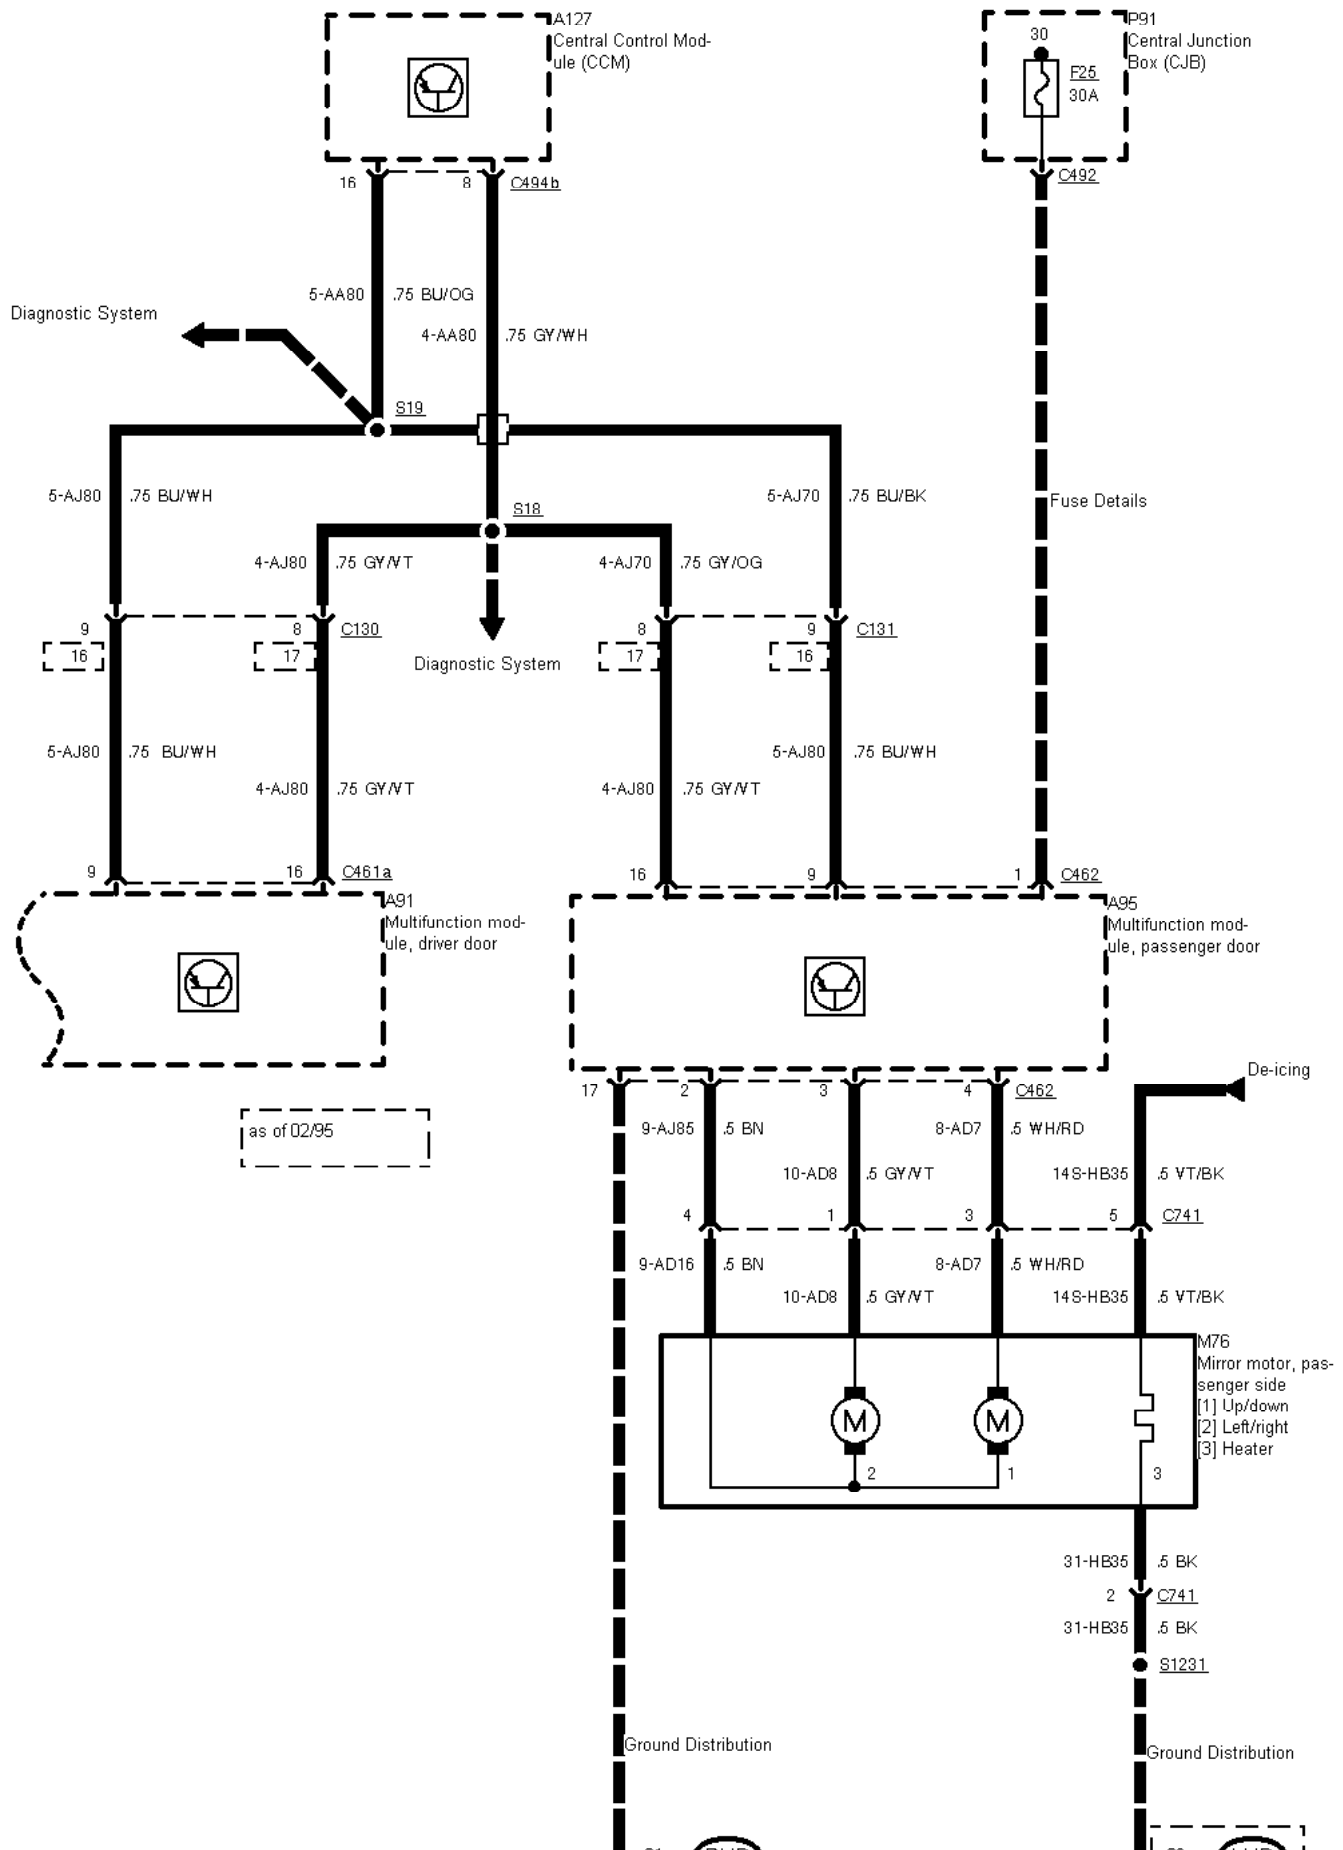




---

43-02-003 , Power Mirrors with Module , With memory

---

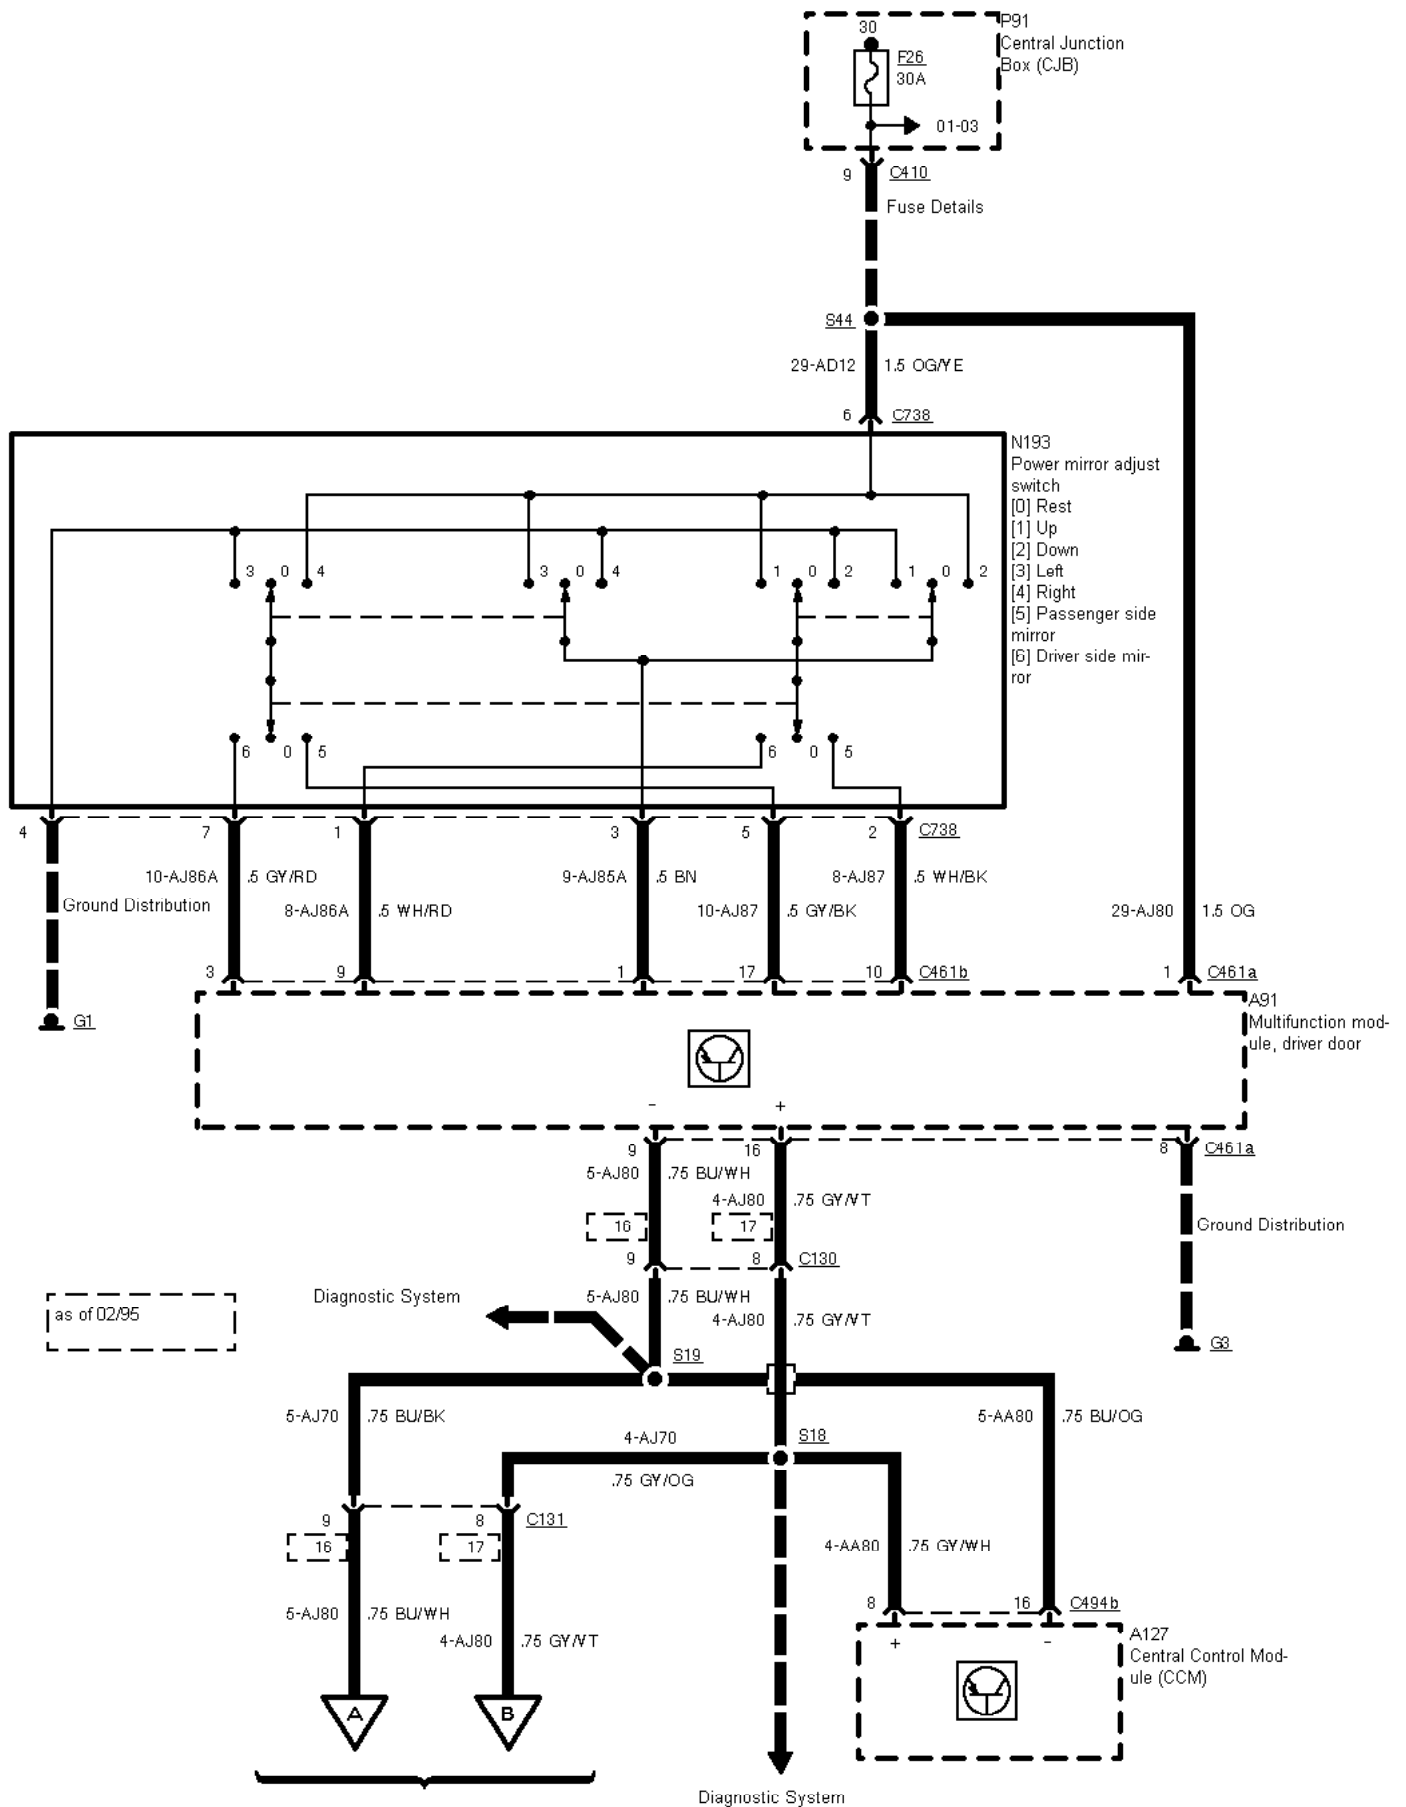


as of 02/95


---

**43-02-004 , Power Mirrors with Module , With memory**

---

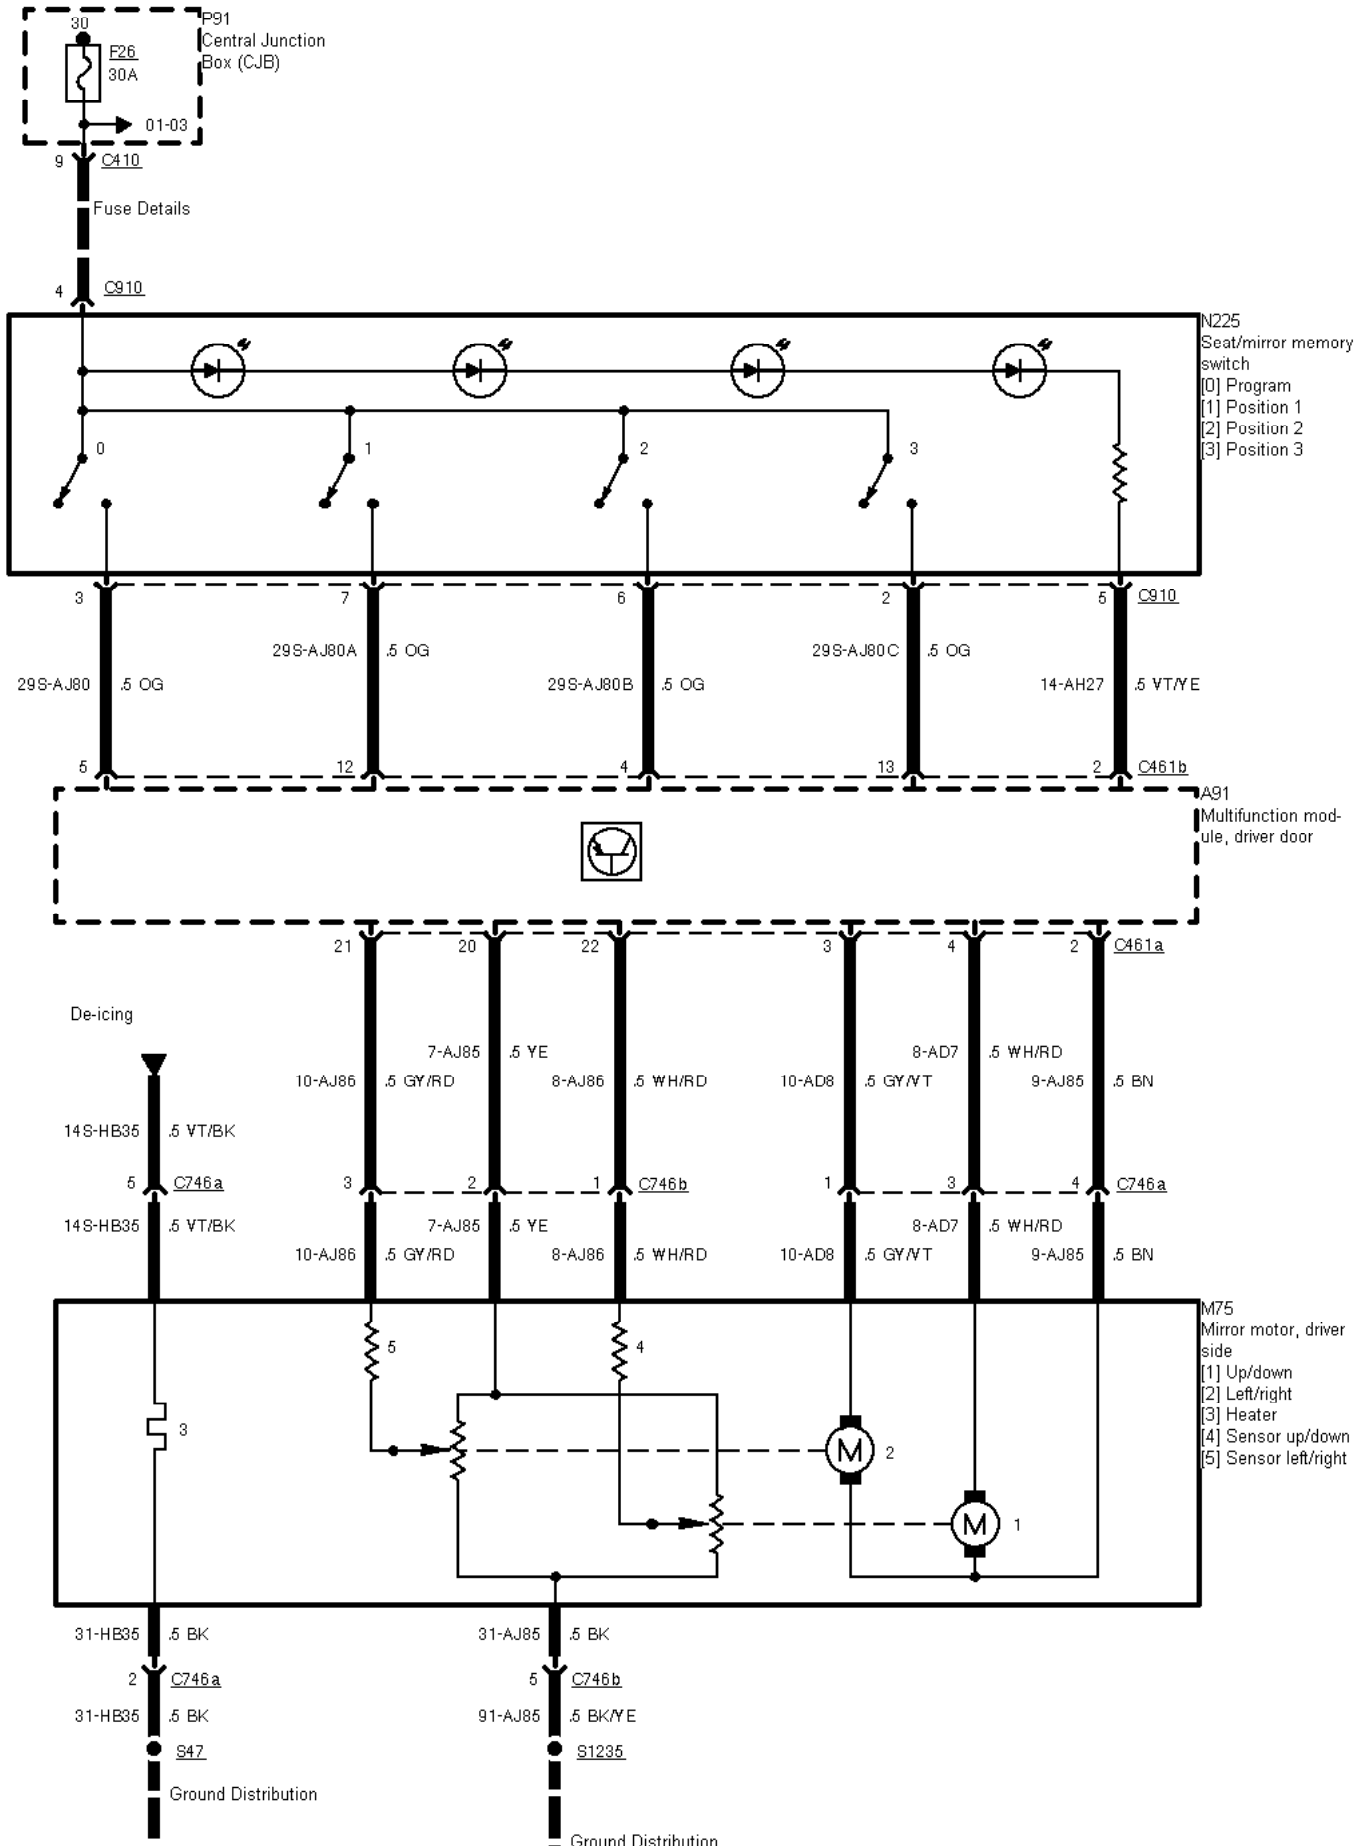



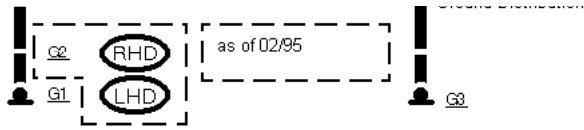

---

43-02-005 , Power Mirrors with Module , With memory

---

