


Color codes:
 BL = BLAU/BLUE
 BR = BRAUN/BROWN
 GE = GELB/YELLOW
 GN = GRUN/GREEN
 RT = ROT/RED
 SW = SCHWARTZ/BLACK
 WS = WEISS/WHITE

**FORD SIERRA RS COSWORTH
 3-DOOR
 LEFT HAND DRIVE
 GERMANY
 ENGINE CONTROL DIAGRAM**

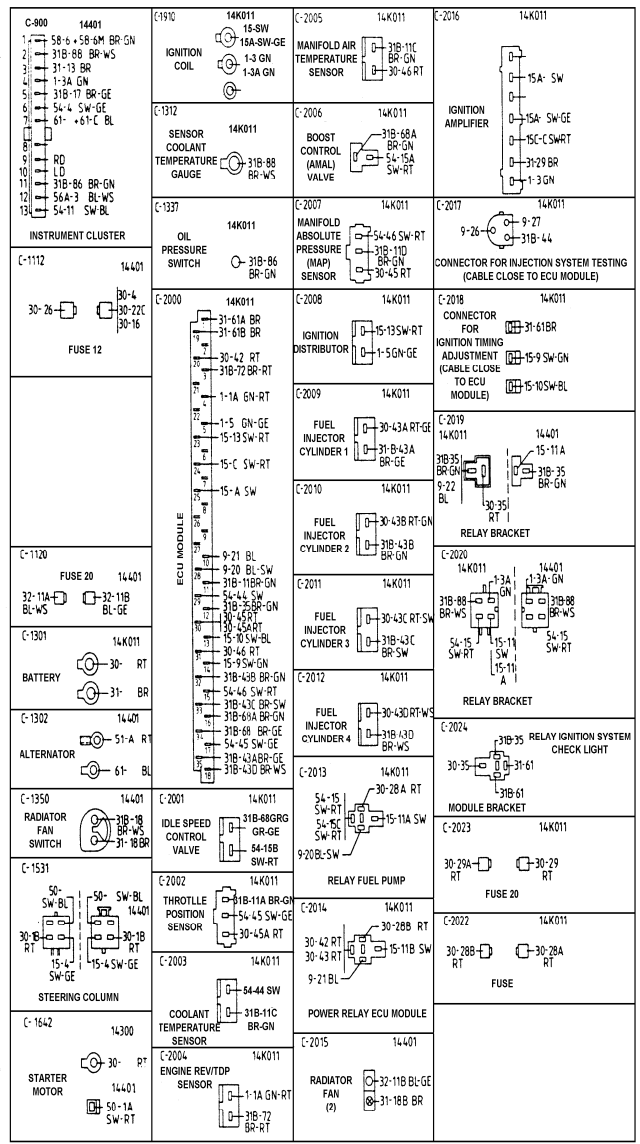

SOLDERING POSITION CODES

S-116	14401	CLOSE TO FUEL PUMP CONNECTION
S-1001	14401	CLOSE TO BATTERY CONNECTION
S-1002	14401	CLOSE TO ALTERNATOR CONNECTION
S-1021	14401	CLOSE TO IGNITION SWITCH CONNECTION
S-1030	14401	CLOSE TO FUEL LEVEL SENSOR CONNECTION
S-1041	14K011	CLOSE TO ECU MODULE CONNECTION
S-1048	14K011	CLOSE TO ECU MODULE CONNECTION
S-1049	14K011	CLOSE TO WIRING PROTECTION SLEEVE CONNECTION
S-1050	14K011	CLOSE TO ECU MODULE CONNECTOR CONNECTION
S-1051	14K011	CLOSE TO FUEL INJECTORS CONNECTION
S-1052	14K011	CLOSE TO FUEL INJECTORS CONNECTION
S-1053	14K011	CLOSE TO FUSE/RELAY BOX CONNECTION
S-1054	14K011	CLOSE TO BATTERY CONNECTION

GROUND CONNECTION CODES

G-1002	CLOSE TO BATTERY
G-1005	CLOSE TO LEFT HEAD LIGHT
G-1010	CLOSE TO TAILGATE LOCK
G-1017	TO THROTTLE CABLE MOUNT
---	SHIELDED CABLE WITH GROUND CONNECTION ON BOTH SIDES